



GEAppliances.com

Wine Cooler

Safety Instructions2-4

Operating Instructions

Control Settings5

Features6

Care and Cleaning

Cleaning the Condenser8

Cleaning the Defrost

Water Pan7

Cleaning the Inside8

Cleaning the Outside7

Defrosting8

Installation9

Moving8

Troubleshooting Tips10, 11

Consumer Support

Consumer Support ... Back Cover

Warranty15

Owner's Manual

24 Bottle Model

Write the model and serial numbers here:

Model # _____

Serial # _____

Find these numbers on a label on the back of the wine cooler.



IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.

⚠ WARNING!

Use this appliance only for its intended purpose as described in this Owner's Manual.



SAFETY PRECAUTIONS


When using electrical appliances, basic safety precautions should be followed, including the following:

- This wine cooler must be properly installed and located in accordance with these instructions before it is used.
- Do not allow children to climb, stand or hang on the shelves in the wine cooler. They could damage the wine cooler and seriously injure themselves.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Keep fingers out of the "pinch point" areas; clearances between the doors and between the doors and cabinet are necessarily small. Be careful closing doors when children are in the area.
- Unplug the wine cooler before cleaning and making repairs.

NOTE: We strongly recommend that any servicing be performed by a qualified individual.
- Turning the temperature control dial to the **OFF** position stops cooling but does not shut off power to the wine cooler.

⚠ DANGER! RISK OF CHILD ENTRAPMENT

PROPER DISPOSAL OF THE WINE COOLER

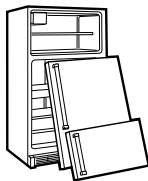

Child entrapment and suffocation are not problems of the past. Junked or abandoned refrigeration products are still dangerous...even if they will sit for "just a few days." If you are getting rid of your old appliance, please follow the instructions below to help prevent accidents.

 
Before You Throw Away Your Old Refrigeration Product:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

CFC Disposal

Old refrigeration products may have a cooling system that used CFCs (chlorofluorocarbons). CFCs are believed to harm stratospheric ozone.

If you are throwing away an old refrigeration product, make sure the CFC refrigerant is removed for proper disposal by a qualified servicer. If you intentionally release this CFC refrigerant you can be subject to fines and imprisonment under provisions of environmental legislation.



GEAppliances.com



USE OF EXTENSION CORDS

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord.

However, if you must use an extension cord, it is absolutely necessary that it be a UL-listed, 3-wire grounding type appliance extension cord having a grounding type plug and outlet and that the electrical rating of the cord be 15 amperes (minimum) and 120 volts.



HOW TO CONNECT ELECTRICITY

Do not, under any circumstances, cut or remove the third (ground) prong from the power cord. For personal safety, this appliance must be properly grounded.

The power cord of this appliance is equipped with a 3-prong (grounding) plug which mates with a standard 3-prong (grounding) wall outlet to minimize the possibility of electric shock hazard from this appliance.

Have the wall outlet and circuit checked by a qualified electrician to make sure the outlet is properly grounded.

If you have only a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.

The wine cooler should always be plugged into its own individual electrical outlet which has a voltage rating that matches the rating plate.

This provides the best performance and also prevents overloading house wiring circuits which could cause a fire hazard from overheated wires.

Never unplug your wine cooler by pulling on the power cord. Always grip plug firmly and pull straight out from the outlet.

Repair or replace immediately all power cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.

When moving the wine cooler away from the wall, be careful not to roll over or damage the power cord.

 
 
 
Safety Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support



IMPORTANT SAFETY INFORMATION. READ ALL INSTRUCTIONS BEFORE USING.

⚠ WARNING!



USE OF ADAPTER PLUGS

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an adapter plug.

However, if you must use an adapter, where local codes permit, a **temporary connection** may be made to a properly grounded 2-prong wall outlet by use of a UL-listed adapter available at most local hardware stores.

The larger slot in the adapter must be aligned with the larger slot in the wall outlet to provide proper polarity in the connection of the power cord.

When disconnecting the power cord from the adapter, always hold the adapter in place with one hand while pulling the power cord plug with the other hand. If this is not done, the adapter ground terminal is very likely to break with repeated use.

 
If the adapter ground terminal breaks, **DO NOT USE** the wine cooler until a proper ground has been established.

Attaching the adapter ground terminal to a wall outlet cover screw does not ground the appliance unless the cover screw is metal, not insulated, and the wall outlet is grounded through the house wiring. You should have the circuit checked by a qualified electrician to make sure the outlet is properly grounded.



READ AND FOLLOW THIS SAFETY INFORMATION CAREFULLY.


SAVE THESE INSTRUCTIONS



About the control.

GEAppliances.com

The temperature control is located on the back of the wine cooler.

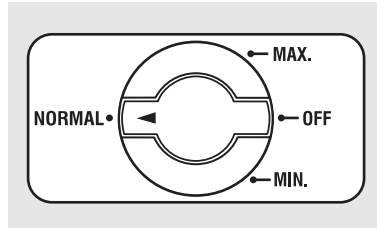

For regular operation, the temperature control knob should be set to the NORMAL position.

MAX is the coldest setting.
MIN is the warmest setting.

Once the bottles are loaded, allow at least 48 hours before making any adjustments to the initial setting.



Control Settings

The temperature range of the wine cooler is from the mid-forties to the mid-sixties in degrees Fahrenheit.

As with any refrigeration product, there is a slight temperature variance at different locations within the cabinet.

The coolest shelves in the unit are the two middle shelves.

Position your wine inventory accordingly (i.e, white wines in the cooler zones and red in the warmer zones).

NOTE: Make sure that the wine bottles do not touch the back wall. The bottles may collect condensation, which will drain into the bottom of the unit.

Safety Instructions


Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support

About the features.

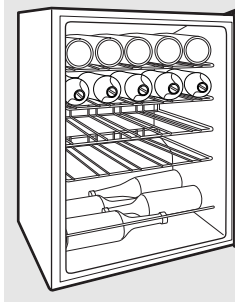

Pull-Out Racks

The four racks can be pulled out 1/2 way to allow the easy addition or removal of wine bottles.

 
The top rack holds up to five wine bottles with the necks towards the back.

The center three racks hold up to five wine bottles with the necks towards the front.

Up to four regular wine bottles can be placed in the bottom of the unit. The bottom can also be used to store large or irregularly shaped bottles.

Automatic Humidity Control

The inside of the wine cooler automatically maintains the necessary level of humidity to protect wine corks from drying out. As a result, frost may form on the inner surfaces. See *Care and Cleaning* for instructions on removing excessive frost buildup.



Care and cleaning.

GEAppliances.com

Cleaning the Outside


IMPORTANT: Unplug the wine cooler before cleaning.

Keep the outside clean. The cabinet can be washed with mild soap and water. Rinse thoroughly with clear water. Never use abrasive scouring powders.

Use a glass cleaner or mild soap and water and a soft cloth to clean the glass door. Do not use any abrasive powders.

Do not wipe the wine cooler with a soiled dish cloth or wet towel. These may leave a residue that can erode the paint. Do not use scouring pads, powdered cleaners, bleach or cleaners containing bleach because these products can scratch and weaken the paint finish.

Protect the paint finish. The finish on the outside of the wine cooler is a high-quality, baked-on paint finish. With proper care, it will stay new-looking and rust-free for years. Apply a coat of kitchen/appliance wax when the wine cooler is new, and then at least twice a year.

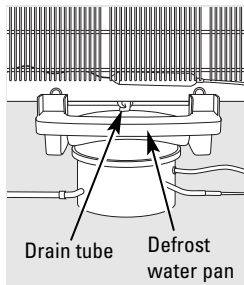

Cleaning the Defrost Water Pan

IMPORTANT: Unplug the wine cooler before cleaning.

The pan should be cleaned out at least once a year, or whenever the wine cooler is defrosted.

Remove the pan by firmly pulling it straight out. When replacing the pan, make sure to position it under the drain tube.

Clean the pan using a clean cloth or sponge and a warm water and baking soda solution—about one tablespoon (15 ml) of baking soda to a quart (1 liter) of water. This both cleans and neutralizes odors. Rinse and wipe dry.

Safety Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support

Care and cleaning.

Cleaning the Inside

IMPORTANT: Unplug the wine cooler before cleaning.

To clean the inner liner and racks, use a warm water and baking soda solution—about one tablespoon (15 ml) of baking soda to a quart (1 liter) of water. This both cleans and neutralizes odors. Rinse and wipe dry.

The vinyl door gasket may be cleaned with mild soap and water, a baking soda solution or a mild scouring powder. Rinse well.

Do not use detergents, scouring powders, spray cleaners or other harsh chemicals to clean the interior.

Defrosting

Defrost whenever frost on the inside surfaces of the storage area becomes 1/4" thick. **Never use a heater of any kind, scraper or sharp instrument to remove frost as it may damage the wine cooler.**

To defrost, set the temperature control dial at **OFF** position. Remove the contents and wipe inside surfaces and racks with a clean towel. If frost does not come off easily, allow the frost to melt somewhat and wipe off.

After defrosting, clean the defrost water pan; see *Cleaning the Defrost Water Pan*. Make sure inside surfaces are dry; then return the contents to the wine cooler and turn the temperature control to the desired setting.

Preparing to Move

Secure all loose items such as racks by taping them securely in place to prevent damage.


Be sure the wine cooler stays in an upright position during moving.

Cleaning the Condenser

IMPORTANT: Unplug the wine cooler before cleaning.


Sweep away or vacuum up dust.

For best results, use a brush specially designed for this purpose. It is available at most appliance stores.

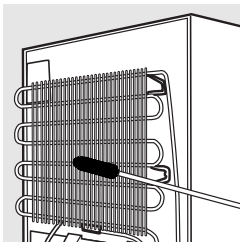

Installing the wine cooler.

GEAppliances.com

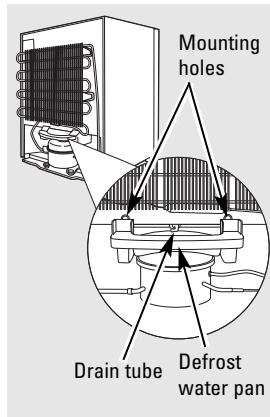

Installing the Defrost Water Pan

The wine cooler comes with a defrost water pan that is shipped inside the unit. It is important to install the pan over the compressor as shown.

Slide the defrost water pan in so the two support pins are fully seated in the mounting holes.

Make sure the pan is positioned under the drain tube.

Read these instructions completely and carefully.

- The wine cooler is intended for *freestanding operation* only. Do not enclose it or install it in a recessed area.
- Do not install the wine cooler where the temperature will go below 50°F (10°C) because it will not run often enough to maintain proper temperatures.
- Install it on a level floor or counter strong enough to support it when fully loaded.
- If it is placed on a countertop, the front surface of the door should be 3" (8 cm) or more back from the edge of the countertop or stand to avoid accidental tipping of the appliance during normal use.
- Allow at least 2" (6 cm) of space between the back of the wine cooler and the wall, to allow proper air circulation.
- Do not install where it will be subject to direct sunlight, heat or moisture.

Safety Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support

Before you call for service...



Troubleshooting Tips

Save time and money! Review the chart below first and you may not need to call for service.

Problem	Possible Causes	What To Do
Wine cooler does not operate	Control in OFF position.	<ul style="list-style-type: none"> • Move the control to a temperature setting.
	Wine cooler is unplugged.	<ul style="list-style-type: none"> • Push the plug completely into the outlet.
	The unit was recently turned off or unplugged.	<ul style="list-style-type: none"> • The wine cooler is equipped with a thermostat control device. You must allow at least three minutes before restarting the unit or plugging it back in.
	The fuse is blown/circuit breaker is tripped.	<ul style="list-style-type: none"> • Replace fuse or reset the breaker.
Vibration or rattling (slight vibration is normal)	Wine cooler is on an uneven surface.	<ul style="list-style-type: none"> • Use shims to level the wine cooler.
Motor operates for long periods or cycles	Normal when wine cooler is first plugged in.	<ul style="list-style-type: none"> • Wait 24 hours for the wine cooler to completely cool down.
	Often occurs when large amounts of wine are placed in wine cooler.	<ul style="list-style-type: none"> • This is normal.
	Door left open.	<ul style="list-style-type: none"> • Check to see if a bottle is holding door open.
	Hot weather or frequent door openings.	<ul style="list-style-type: none"> • This is normal.
	Temperature control set at the coldest setting.	<ul style="list-style-type: none"> • See <i>About the control</i>.
	Not enough clearance from the wall.	<ul style="list-style-type: none"> • Make sure there is enough air circulation around the wine cooler.

GEAppliances.com

Problem	Possible Causes	What To Do
Wine cooler too warm	Temperature control not set cold enough.	• See <i>About the control</i> .
	Warm weather or frequent door openings.	• Set the temperature control one step colder. See <i>About the control</i> .
	Door left open.	• Check to see if a bottle is holding door open.
Wine cooler has odor	Interior needs cleaning.	• See <i>Care and cleaning</i> .
	Defrost water pan needs cleaning.	• See <i>Care and cleaning</i> .
Moisture forms on outside of wine cooler	Not unusual during periods of high humidity.	• Wipe surface dry.
Moisture collects inside (in humid weather, air carries moisture into wine cooler when door is opened)	Too frequent or too long door openings.	
	Wine bottles touching the back wall.	• Reposition bottles.
Frost forms on interior surfaces of wine cooler	This is normal.	• See the Defrosting section under <i>Care and cleaning</i> .
Wine cooler too cold	Temperature control set too cold.	• See <i>About the control</i> .

Safety Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support



Safety Instructions

 
 
 
Operating Instructions

 
Care and Cleaning

Troubleshooting Tips

Consumer Support

Notes.





GEAppliances.com

 
 
 
Safety Instructions

Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support





Safety Instructions

 
 
 
Operating Instructions

Care and Cleaning

Troubleshooting Tips

Consumer Support

Notes.





Wine Cooler Warranty.



All warranty service provided by our Factory Service Centers, or an authorized Customer Care® technician. To schedule service, on-line, 24 hours a day, visit us at GEAppliances.com, or call 800.GE.CARES (800.432.2737).

Staple your receipt here. Proof of the original purchase date is needed to obtain service under the warranty.

For The Period Of:	GE Will Replace:
One Year From the date of the original purchase	Any part of the wine cooler which fails due to a defect in materials or workmanship. During this limited one-year warranty , GE will also provide, free of charge , all labor (does not include service trip to your home) to replace the defective part.
Five Years From the date of the original purchase	The compressor if it fails due to a defect in materials or workmanship. This additional four-year limited warranty does not include service labor charges or service trips to your home.

What GE Will Not Cover:

- Service trips to your home to teach you how to use the product.
- Improper installation.
- Failure of the product if it is abused, misused, or used for other than the intended purpose or used commercially.
- Loss of wine due to spoilage.
- Replacement of house fuses or resetting of circuit breakers.
- Damage to the product caused by accident, fire, floods or acts of God.
- Incidental or consequential damage caused by possible defects with this appliance.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for home use within the USA. In Alaska, the warranty excludes the cost of shipping or service calls to your home.

Some states do not allow the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: General Electric Company, Louisville, KY 40225

Safety Instructions
Operating Instructions
Care and Cleaning
Troubleshooting Tips
Consumer Support



Consumer Support



GE Appliances Website

GEAppliances.com

Have a question or need assistance with your appliance? Try the GE Appliances Website 24 hours a day, any day of the year! For greater convenience and faster service, you can now download Owner's Manuals, order parts, catalogs, or even schedule service on-line. You can also "Ask Our Team of Experts™" your questions, and so much more...



Schedule Service

GEAppliances.com

Expert GE repair service is only one step away from your door. Get on-line and schedule your service at your convenience 24 hours any day of the year! Or call 800.GE.CARES (800.432.2737) during normal business hours.



Real Life Design Studio

GEAppliances.com


GE supports the Universal Design concept—products, services and environments that can be used by people of all ages, sizes and capabilities. We recognize the need to design for a wide range of physical and mental abilities and impairments. For details of GE's Universal Design applications, including kitchen design ideas for people with disabilities, check out our Website today. For the hearing impaired, please call 800.TDD.GEAC (800.833.4322).



Extended Warranties

GEAppliances.com

Purchase a GE extended warranty and learn about special discounts that are available while your warranty is still in effect. You can purchase it on-line anytime, or call 800.626.2224 during normal business hours. GE Consumer Home Services will still be there after your warranty expires.

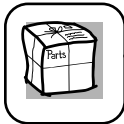

Parts and Accessories

GEAppliances.com

Individuals qualified to service their own appliances can have parts or accessories sent directly to their homes (VISA, MasterCard and Discover cards are accepted). Order on-line today, 24 hours every day or by phone at 800.626.2002 during normal business hours.

Instructions contained in this manual cover procedures to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.



Contact Us

GEAppliances.com

If you are not satisfied with the service you receive from GE, contact us on our Website with all the details including your phone number, or write to:

General Manager, Customer Relations
GE Appliances, Appliance Park
Louisville, KY 40225



Register Your Appliance

GEAppliances.com

Register your new appliance on-line—at your convenience! Timely product registration will allow for enhanced communication and prompt service under the terms of your warranty, should the need arise. You may also mail in the pre-printed registration card included in the packing material.