GE Monogram®


ZX27QDC <u>LP Quick Disco</u>nnect Tee

Assembly Instructions

For Combination Installation of 27" Gas Grill and Dual Burner Outdoor Cooktop

Use this kit when installing a Monogram Dual Burner Outdoor Cooktop (Model ZX2L) onto a 27" LP Gas Grill installed on a cart. (Model ZGG27L21 and ZGG27L20)


This kit provides a Quick Disconnect Tee and a quick disconnect hose.

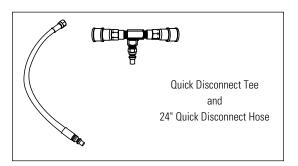

- Completely close the main valve on the LP tank supplying the grill.
- Apply joint compound to the threaded end of the cooktop gas inlet.
- Tighten the 1/2" NPT x 3/8" flare fitting to the cooktop gas outlet. Do not use threading compound on the male threads.
- Attach hose to end of fitting and tighten.

NOTE: To connect the Quick Disconnect couplings, pull back and hold the outer sleeve of the female coupling while inserting the male hose end. Release the outer sleeve to lock. To test the connection, firmly grasp each part and attempt to pull apart. Once locked, they should not separate.

- Route the cooktop LP hose through the panel bushing on the right side of the cart.
- Insert the male hose end from the cooktop burner into one end of the quick disconnect tee.
- Attach the hose from the grill to the opposite female end of the quick disconnect tee.
- Secure the bottom male end of the quick disconnect tee to the female quick disconnect LP tank regulator assembly.

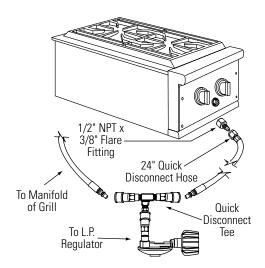

WARNING

TEST FOR LEAKS

A complete gas tightness check must be performed at the installation site. DO NOT USE A FLAME TO CHECK FOR GAS LEAKS.

- Do not use the burner until all connections have been leak tested.
- Repeat leak test after each LP tank change or gas re-connect.

Refer to "Test for Leaks," Step 4 in the Installation Instructions, for the outdoor cooktop.

Monogram®.

Pub. No. 49-80044 Dwg. No. 164D4290P013

© 2000 GE Appliances Printed in USA (N.D. 675) 8/00