

INSTALLATION INSTRUCTION FOR YOUR NEW 30" BUILT IN WALL OVEN W/MICROWAVE


- Before you begin-Read these instructions carefully and completely
- **IMPORTANT**-Save these instructions for local inspector's use.
- **IMPORTANT-OBSERVE ALL GOVERNING CODES AND ORDINANCES.**
- **Note to Installer-** Be sure to leave these instructions with the consumer.
- **OWNER-** Keep these instructions for future reference.
- **NOTE-** This appliance must be properly grounded.
- If you have any questions concerning the installation of this product, call the GE Answer Center Consumer Information Service at 800-626-2000, 24 hours a day, 7 days a week.

TABLE OF CONTENTS

Safety Instruction.....	1
Electrical Requirements.....	1
Tools You Will Need.....	1
Installation Check Sheet	2-3
Preparing the Oven	4
Electrical Connections.....	5
New Construction and Four Conductor Branch Circuit connection.....	5
Three Conductor Branch Circuit Connection	5
Securing the Oven in opening	6
Installing the Bottom Trim	7
Replacing the Oven Door	7
Appendix for Cutout Opening	8

TOOLS AND MATERIALS YOU WILL NEED

1/8" Drill Bit
Electric or Hand Drill
Phillips Screwdriver
Strain Relief Clamp
Junction Box
Wire Nuts
36" of String

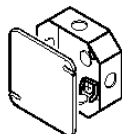

Parts Supplied
4 screws (single)
8 screws (double)
Plastic Bottom Trim



SAFETY INSTRUCTIONS

- Be sure your oven is installed properly by a qualified installer or service technician.
- Be sure the oven is securely installed in a cabinet that is firmly attached to the house structure. Weight on the oven door could cause the oven to tip and result in injury. Never allow anyone to climb, sit, stand or hang on the oven door.
- Make sure the cabinets and wall coverings around the oven can withstand the temperatures (up to 200°F.) generated by the oven.



CAUTION: The electrical power to the oven supply line must be shut off while line connections are being made. Failure to do so could result in serious injury or death.

ELECTRICAL REQUIREMENTS

This appliance must be supplied with the proper voltage and frequency, and connected to an individual, properly grounded branch circuit, protected by a circuit breaker or fuse, having amperage as noted on rating plate. (Rating Plate is located on the wall inside the microwave oven.)

We recommend you have the electrical wiring and hookup of your oven connected by a qualified electrician. After installation, have the electrician show you where your main range disconnect is located.

Check with your local utilities for electrical codes which apply in your area. Failure to wire your oven according to governing codes could result in a hazardous condition. If there are not local codes, your range must be wired and fused to meet the requirements of the National Electrical Code, ANSI/NFPA No. 70-Latest Edition. You can get a copy by writing:

National Fire Protection Association
Battery March Park
Quincy, MA 02269

Effective January 1, 1996, the National Electrical Code requires that new, but not existing, construction utilize a 4 conductor connection to an electric range. When installing an electric range in new construction, follow the instructions in **NEW CONSTRUCTION AND FOUR CONDUCTOR BRANCH CIRCUIT CONNECTION.**

You must use a three-wire, single-phase A.C. 208Y/120 Volt or 240/120 Volt, 60 hertz electrical system. If you connect to aluminum wiring, properly installed connectors approved for use with aluminum wiring must be used.



INSTALLATION COMPLETION CHECKLIST




Prep the Oven (Refer to page 4 for full instructions)

1

2

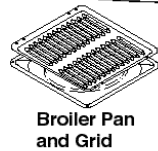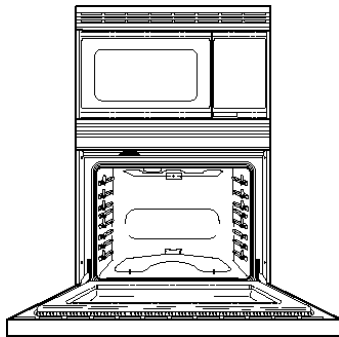

Broiler Pan and Grid

 

Oven Racks



Literature Pack


Remove literature prepack, broiler pan and grid, and racks from oven.

3




Read instructions

4

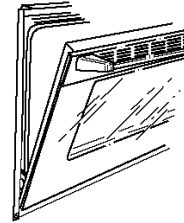


Remove oven door

5

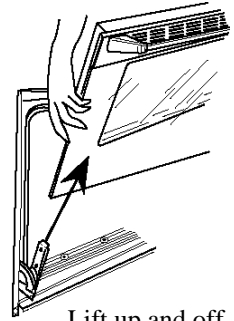


Lift up and off

6

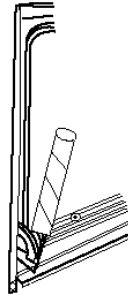


Remove hinge

7

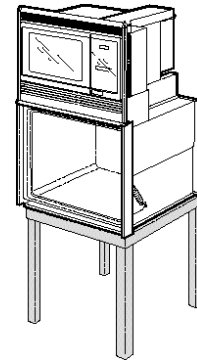

Place oven on platform

8

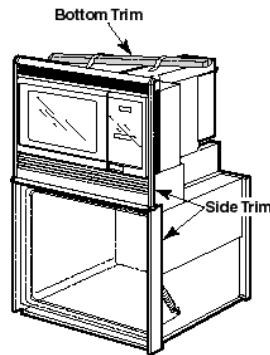


Remove bottom trim from top of unit.



Make Electrical Connections (De-Energize Branch Circuit)


9

10

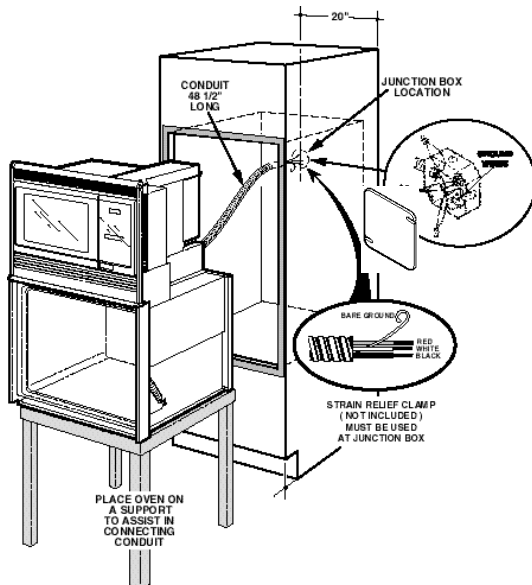


Connect electrical conduit

Three-Conductor Branch Circuit Connection

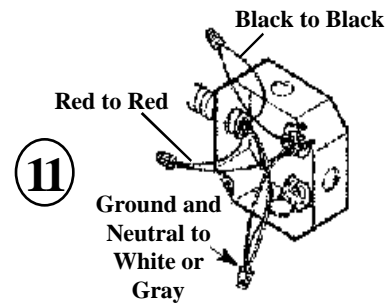

11

Four-Conductor Branch Circuit Connection

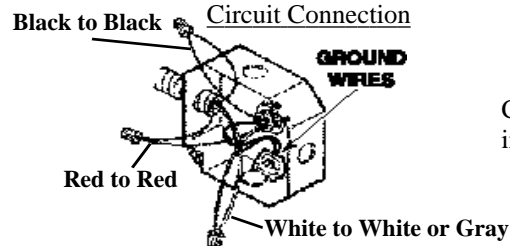


Connect conduit into junction box

INSTALLATION COMPLETION CHECKLIST CONT.

✓ Secure the Oven


12

Slide Oven into Cutout while pulling the conduit up and out of the way.

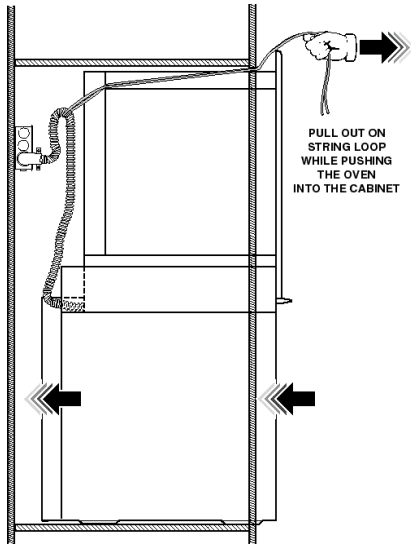

13

14

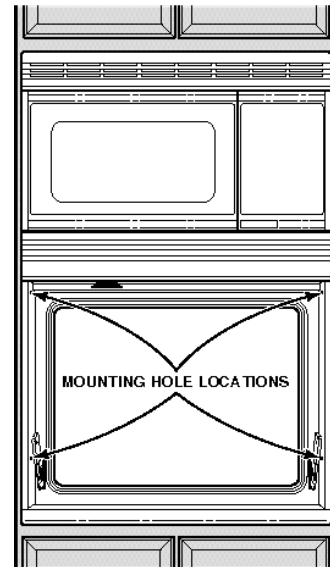

Use screws provided to secure the oven


✓ Install Bottom Trim

15

16



17

18

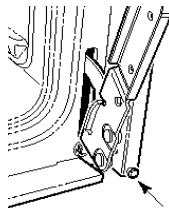

Lower trim mounting rivet on bottom of side trim

Key hole slot and wide flange at top

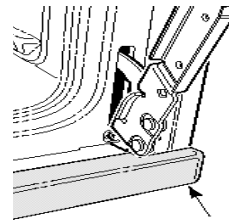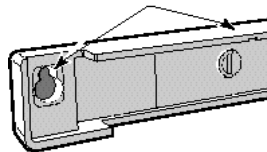

Push trim down at both ends until it snaps into place

✓ Replace the Oven Door

19


22

20

23

21


24

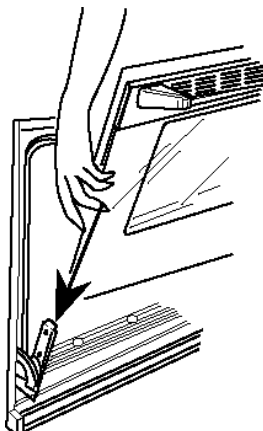

PREPARING YOUR OVEN

- 1 Remove packaging materials. Check inside microwave, behind hinges, and under false bottom. Remove labels on door, plastic on trims and panel, and all tape around oven.

- 2 Open oven door and remove literature prepack, broiler pan and grid, and oven racks. Open microwave door and remove shelves and turntable package.

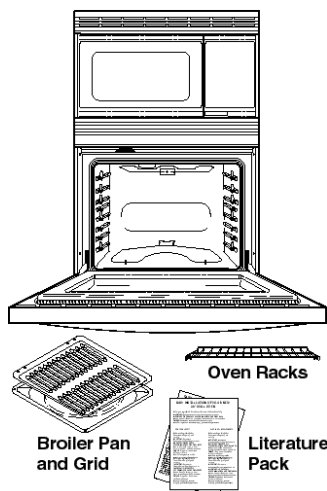


- 3 Remove Installation Instruction from literature prepack and read them carefully before you begin. Be sure to place all literature, Use and Care, Installations, etc. in a safe place for future reference.




- 4 Open the oven door to the stop position.

DO NOT LIFT THE DOOR BY THE HANDLE!

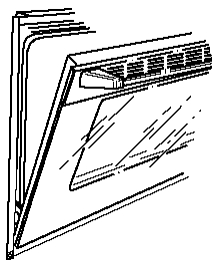


- 5 Grasp the door on both sides and lift up and off the hinges.

NOTE: The oven door is very heavy. Be sure you have a firm grip before lifting the oven door off the hinges. Use caution once the door is removed. Do not lay the door on its handle, this could cause dents or scratches

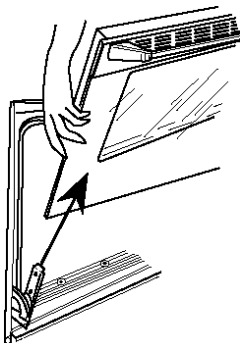


- 6 **CAUTION:** When the door is removed and the hinge arms are at the stop position, DO NOT bump or try to move the hinge arms. The hinges could snap back causing an injury to the hands. Cover the hinges with toweling or empty towel rolls while working in the oven area.

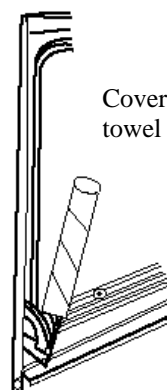


Cover hinge with paper towel rolls or toweling.

- 7 Place the oven on a table or platform even with the cutout opening. (Platform must support 225 lbs.)

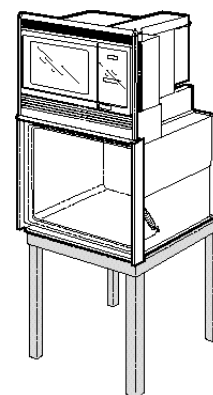


- 8 Remove the bottom trim from the top of the oven. It will be installed at the end of installation. The trim is wrapped separately and taped to the top of the unit.

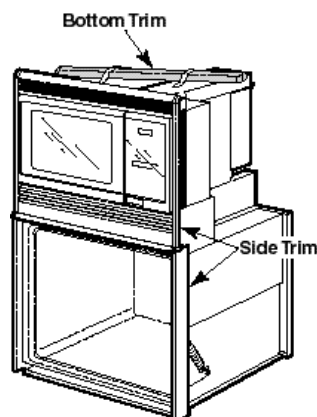

ELECTRICAL CONNECTIONS


- 9 Turn off the circuit breaker or remove fuses to the oven branch circuit.
- 10 With the oven in front of the cabinet opening, on a table or platform, connect the flexible conduit to the electrical junction box as shown below. **You will need to purchase a strain relief clamp to complete the connection of the conduit to the junction box.**

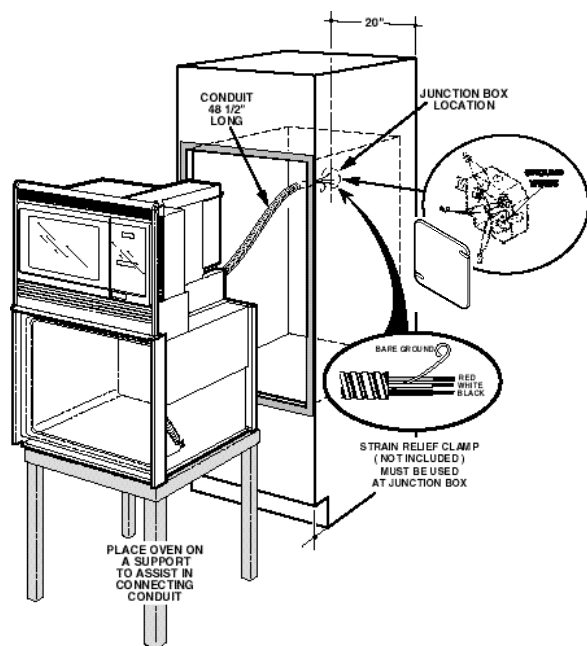

NEW CONSTRUCTION AND FOUR-CONDUCTOR BRANCH CIRCUIT CONNECTION

- 11
 - When installing in a new construction, or
 - When installing oven in a mobile home, or
 - When local codes do not permit grounding through neutral:

- a. Cut the neutral (White) lead from the crimp. Re-strip the neutral (white) lead to expose the proper length of conductor.
- b. Attach the appliance ground lead (green or bare copper) according with local codes. If the residence grounding conductor is aluminum, see WARNING note.

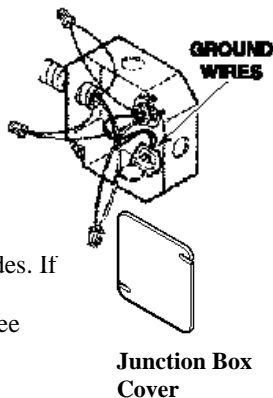


- c. Connect the oven neutral (white) lead to the branch circuit neutral (white or gray) in accordance with local codes.
- d. Connect the oven red lead to the branch circuit red lead and the oven black lead to the branch circuit black lead in accordance with local codes. If the residence red, black or white leads are aluminum conductors, see "WARNING" note.
- e. Install the Junction Box Cover.

OR

THREE-CONDUCTOR BRANCH CIRCUIT CONNECTION

- 11 When connecting to a 3-conductor branch circuit, if local codes permit:
 - a. Connect the bare oven ground conductor with the crimped neutral (white) lead to the branch circuit neutral (white or gray in color).
 - b. The oven red lead to the branch circuit red lead.
 - c. The oven black lead to the branch circuit black lead in accordance with local codes.
 - d. Install Junction Box Cover.

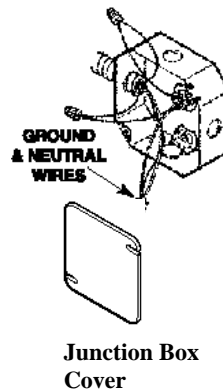

Do not shorten this flexible conduit. The conduit strain relief clamp must be securely attached to the junction box and the flexible conduit must be securely attached to the clamp. If the flexible conduit will not fit within the clamp, do not install the oven until a clamp of the proper size is obtained.

NOTE TO ELECTRICIAN: The 3 power leads supplied with this appliance are UL recognized for connection to larger gauge household wiring. The insulation of these 3 leads is rated at temperatures much higher than the temperature rating of household wiring. The current carrying capacity of the conductor is governed by the temperature rating of the insulation around the wire, rather than the wire gauge alone.




WARNING: Improper connection of aluminum house wiring to copper leads can result in an electrical hazard or fire. Use only connectors designed for joining copper to aluminum and follow the manufacturer's recommended procedure closely.


SECURING THE OVEN IN OPENING

- 12** With the Conduit connected, the oven is ready to be slid into the cutout opening.

- Loop a 36" string around the conduit before the oven is slid into place. This will keep the conduit from falling behind the oven.
- Lift oven into cabinet cutout using the oven opening as an grip. Carefully push against oven front frame. Do not push against outside edges.
- As the oven is slid back, pull the string so that the conduit will lie behind the oven in a natural loop.
- When you are sure the conduit is out of the way, slide the oven all the way back into the opening, remove the string.

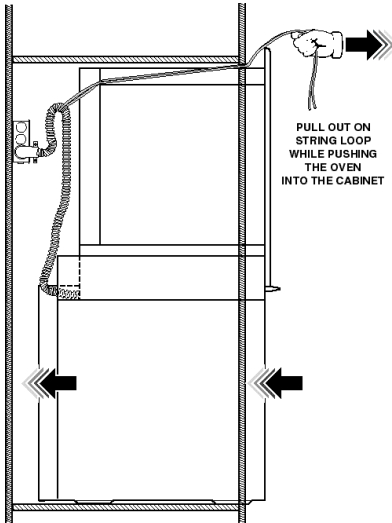

- 13** Drill four 1/8" pilot holes through the mounting holes (top and bottom) of the side trim, for the four #8 screws provided.

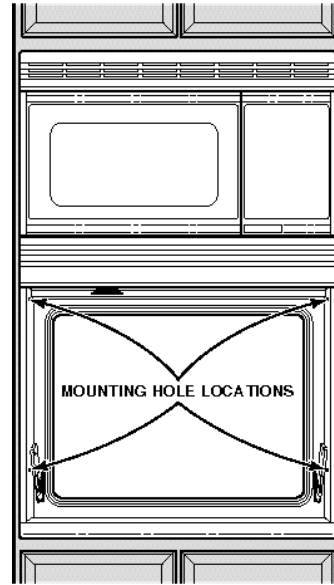

The screws must be a minimum of 1/4" from the front of the cutout.

NOTE: Mounting screws must be used. Failure to do so could result in the oven falling out of the cabinet causing serious injury.



NOTE: Before drilling the pilot holes, make sure the oven is pushed as far back into the opening as it will go and that it is centered.

- 14** Secure the Oven to Cabinet with screws provided.

INSTALLING THE BOTTOM TRIM

- 15** Make sure the flat side is up on the bottom trim.


- 16** Find the Key Slot on the back of the trim.

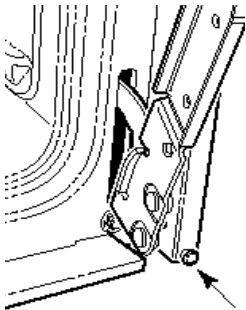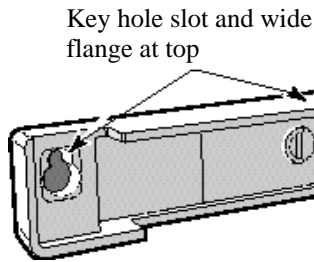

Lower trim mounting rivet on bottom of side trim

- 18** Push the trim down until it snaps into place.

- 17** Match the key slot with the rivet on the bottom of the side trim

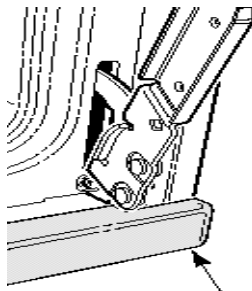

Push trim down at both ends until it snaps into place.

REPLACING THE OVEN DOOR

- 19** Make sure the hinge is in the door stop position.


- 20** Remove the toweling or paper towel holder from the hinge.

- 21** Grasp the door on both sides.

- 22** Hold the door over the hinges aligning the hinges with the hinge slots on the bottom of the door.

- 23** Slide the door down onto the hinges as far as it will go.

- 24** Close the door.

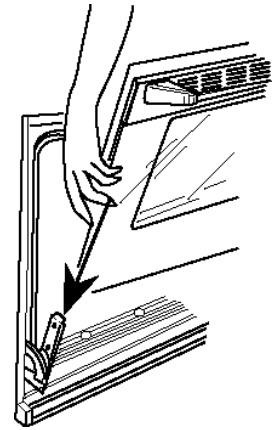


The oven door is heavy. You may need help lifting the door high enough to slide it down onto the hinges. Do not lift the door by the handle.



CAUTION: Be sure you do not tip the oven forward during installation or you may bend the Bottom Trim. The Bottom Trim provides an opening for cooling air to enter the cabinet. This opening should never be blocked.

APPENDIX FOR CUTOUTS OVEN W/MICROWAVE

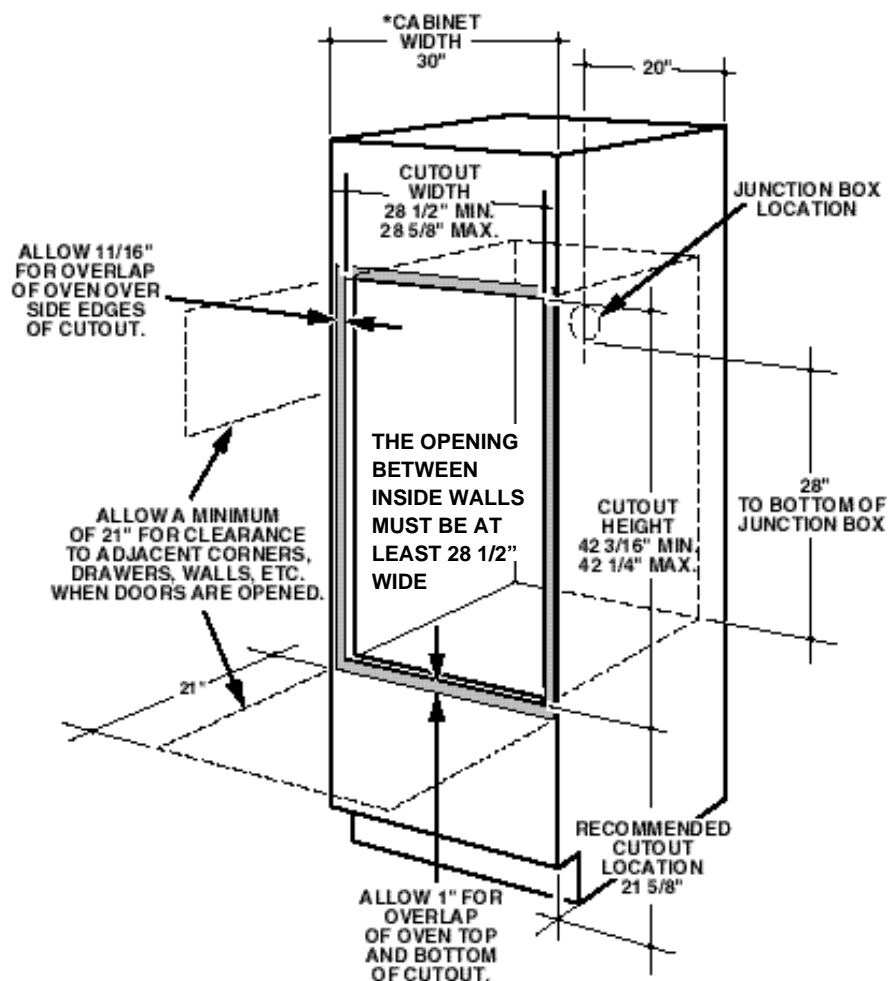

Cabinet Width	30"
Recommended Cutout Location From Floor	21 5/8"
Cutout Depth	23 1/2" Min.
Cutout Width	28 1/2" Min. 28 5/8" Max.
Cutout Height	42 3/16" Min. 42 1/4" Max.

If the cabinets do not have a solid bottom, then two braces or runners must be installed to support the weight of the oven. The runners and braces must support 225 pounds.



NOTE: If the cabinet does not have a front frame and the sides are less than 3/4" thick, shim both sides equally to establish the cutout width.

