

JXS40

INSTALLATION INSTRUCTIONS FOR SLIDE-IN FRONT END CAP KIT # ~~JES01~~

This kit is for use with models RS622GP, RS504P, RS744GP, RS734GP, L3S340GP, JSP26GP, JSP28GP, JSP31GP, JSP38GP, JSS16P, JSC26GP, and JSS26GP.

If you are installing your new slide-in range in a countertop cutout which has been notched previously for notched front end caps, you will wish to replace the flush front end caps on your range with the notched ones in the kit. See Fig. 1 & Fig. 2.

This kit contains:

<u>Part No.</u>	<u>Part Name</u>	<u>Quantity</u>
CAP020	End Cap Left	1
CAP021	End Cap Right	1
INT246	Installation Instructions	1

STEP 1:

Remove 3 screws from each end cap.

Remove end caps.

STEP 2:

Replace with notched end caps and reinstall 3 screws to each end cap.

