

Consumer Quick Reference Guide

This quick reference guide is provided for informational purposes only and does not replace, modify or change in any manner the *Owner's Manual* or *Installation Instructions*.




DO NOT DISCARD. RETAIN FOR FUTURE USE.

For assistance with WiFi connectivity, visit www.GEAppliances.com/connect or call 800-GE-CARES.

Getting Started:

(Some features may only be available on some models)


Step 1: When not using *SmartDispense™* or self-cleaning dispenser cups, add detergent to basket before loading. We recommend the use of High Efficiency detergents such as in your energy efficient washer.

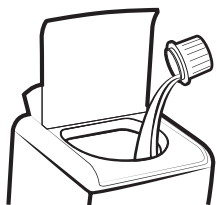


DO NOT put detergent packets in dispenser compartments. Laundry detergent packets should only be added directly to the wash basket following the manufacturer's directions.

Step 2: Loosely add items around infusor and close lid.

NOTE: Overloading may negatively impact wash performance and washer will not begin to FILL with lid open.

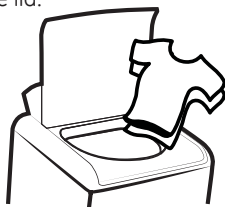

Step 3: Select wash cycle and adjust settings. Activate options like *Deep Rinse* when desired.

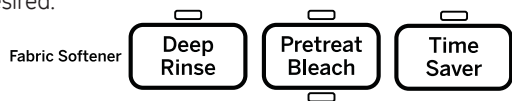


Step 4: Press *Start*.



Water Level:

Thanks to the innovative wash action of this washer, it can operate with high-efficiency, using less water while still getting the load clean. Please expect the below water levels within your washer.

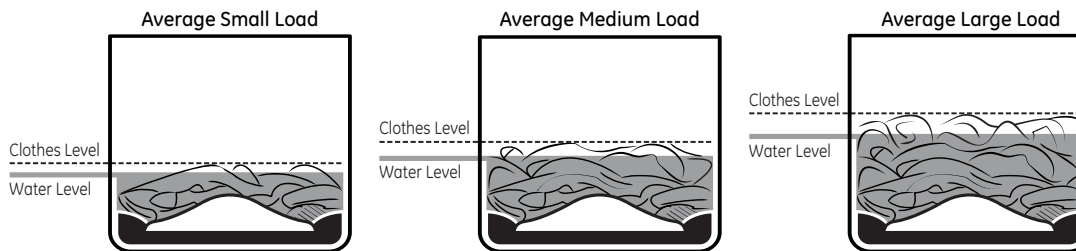

Washer Operation:

Normal operating steps of your High Efficiency Washer

Step 1 - Functionality Check: Once lid is closed and *Start* is pressed, a short spray of water will enter the basket.

Step 2 - Lid Lock: Lid will lock, but can be unlocked by pressing the *Start/Pause* or *Unlock Lid* button.

Step 3 - Cycle Preparation: The basket spins with a dry load and then with a wet load. The washer is measuring load size and determining how much water is needed. Spinning and slight oscillation can be expected.

Step 4 - Fill: Remaining water needed for the wash load will enter the basket.

Step 5 - Wash: Washer will now begin to agitate back and forth turning over the load. A recirculating pump (available on some models) may also operate helping to distribute detergent and fully saturate load. The wash action may pause to allow the load to soak in soapy water.

Step 6 - Rinse: Soapy water will be removed from the basket by using one or two rinse options. The default rinse will cycle through 3 RainShower rinses with a spin between each one. If the *Deep Rinse* option is selected a deep fill rinse will be used.

Step 7 - Spin: Remaining water will be extracted from the load during spin speeds of a 1000 rpm on selected models.

Caring for your Washer:

- Leave the lid open after washing to allow moisture to evaporate.
- Use a clean, soft cloth to clean surface of any spills.
- Run the *Basket Clean* cycle monthly using bleach or a washing machine cleaner. (See *Owner's Manual* for detailed instructions).
- To clean the glass lid, use a clean, soft cloth with a vinegar and water solution.

Washer Warranty:

To schedule service, visit us at GEAppliances.com or call 800.GE CARES (800.423.2737).

For The Period Of:	We Will Replace:
One Year From the date of the original purchase	Any factory specified part of the washer which fails due to a defect in materials or workmanship. During this Limited One-Year Warranty , we will also provide, free of charge , all labor and related service to replace the defective part.

Proof or original purchase date is needed to obtain service under warranty.