



MONOGRAM

Built-In Wall Oven Flush Inset Installation Instructions

Please use this information along with the normal installation instructions to achieve the flush inset installation of your appliance.

ADDITIONAL MATERIALS YOU WILL NEED

- Clean Release Masking Tape – 2" width (min)

PREPARATION

1. Measure your cabinet to ensure all dimensions match the specific flush inset requirements for your model (see chart).
2. Apply Clean Release Masking Tape to all cabinet faces for protection while installing the unit. For each edge of the cabinet opening, start tape 1/2" in from cabinet face and wrap around front face to protect edges. Ensure tape extends around the entire opening - top, bottom, and both sides.

INSTALLATION


1. Follow main instructions for product installation.
2. Remove Clean Release Masking Tape before driving the mounting screws and trapping it in place.
3. Complete remaining steps of installation.



1. Bottom trim flush installation



2. Extruded aluminum trim flush installation

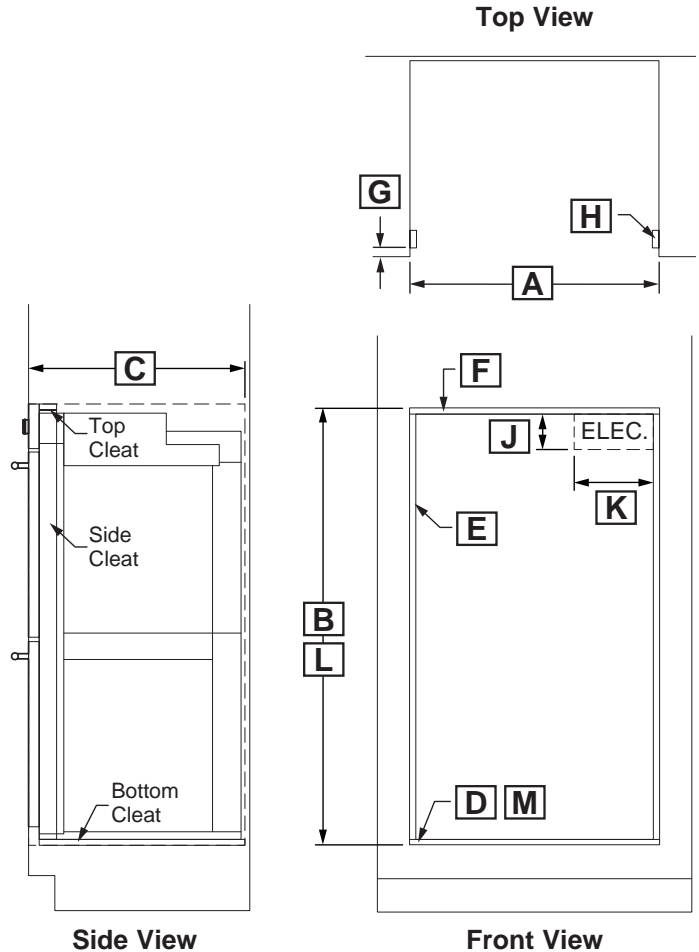

Allow 1/8" clearances from side edges of oven door.

		30"				27"			
		Single Wall Oven		Double Wall Oven		Single Wall Oven		Double Wall Oven	
		ZTS90DS ZTSX1DS	ZTS90DP ZTSX1DP	ZTD90DS ZTDX1DS	ZTD90DP ZTDX1DP	ZKS90DS	ZKS90DP	ZKD90DS	ZKD90DP
1. Bottom trim flush installation									
Cutout	A	Minimum cutout width with 1/8" side reveals							
	B	Minimum cutout height with 1/8" top reveal, 1/4" bottom reveal							
	C	Minimum cutout depth							
	D	Bottom cleat thickness – extends full depth of cabinet							
Cleats	E	Side cleat thickness							
	F	Top cleat thickness							
	G	Setback – all cleats							
	H	Depth - side and top cleats							
Electrical Junction Box	J	Vertical from upper right corner							
	K	Horizontal from upper right corner							
2. Extruded aluminum trim flush installation									
Cutout	L	Minimum cutout height with 1/8" top reveal, 1/8" bottom reveal							
	M	Bottom cleat thickness – extends full depth of cabinet							
		ZTSX1DS ZX30VT1*	ZTSX1DP ZX30VT1*	ZTDX1DS ZX30VT2*	ZTDX1DP ZX30VT2*	ZX27VT1*	ZX27VT1*	ZX27VT2*	ZX27VT2*
		28-5/8	28-5/8	51-1/8	51-1/8	28-13/16	28-13/16	51-1/8	51-1/8
		1/4	1/4	1/4	1/4	1/4	1/4	1/4	1/4

All dimensions shown are in inches.
* Accessory Trim Kits sold as aftermarket only

Instrucciones de Instalación del Horno de Pared Empotrable con Montaje al Ras

Use esta información junto con las instrucciones de instalación normales, a fin de lograr la instalación con montaje al ras de su electrodoméstico.

MATERIALES ADICIONALES QUE NECESITARÁ

- Cinta Adhesiva Clean Release – 2" de ancho (mín.)

PREPARACIÓN

1. Mida el gabinete para asegurarse de que todas las dimensiones coinciden con los requisitos específicos de montaje al ras de su modelo (consulte el cuadro).
2. Aplique Cinta Adhesiva Clean Release en todas las caras del gabinete para proteger la unidad durante la instalación. Para cada extremo de la abertura del gabinete, comience a colocar cinta de ½" desde la cara del gabinete y envuelva la cara frontal para proteger los extremos. Asegúrese de que la cinta se extienda alrededor de toda la abertura – parte superior, inferior, y ambos costados.

INSTALACIÓN

1. Siga las instrucciones principales para la instalación del producto.
2. Retire la Cinta Adhesiva Clean Release antes de colocar los tornillos de montaje y colocar el producto en su posición.
3. Complete los pasos restantes de la instalación.





1. Instalación con marco al ras en el área inferior




2. Instalación con marco al ras de aluminio extruido

Vista Superior

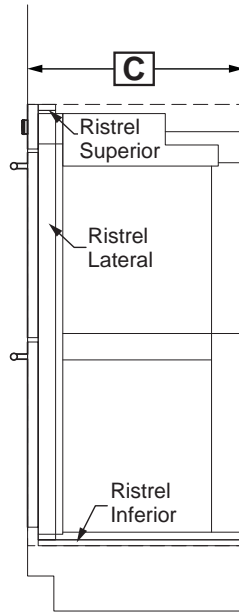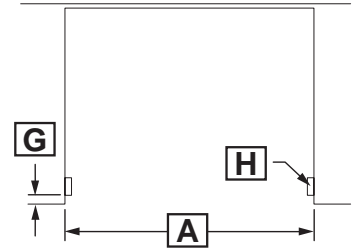

Vista Lateral

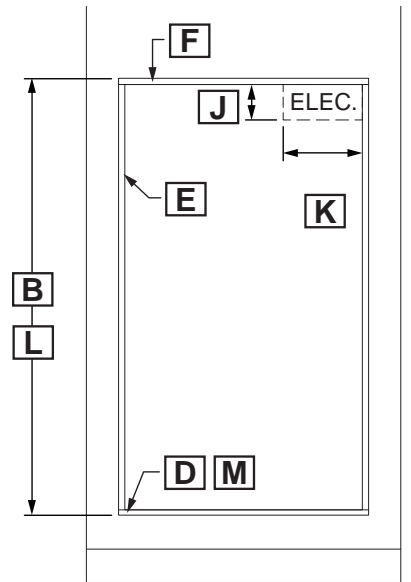

Vista Frontal

Deje espacios de 1/8" sobre los extremos laterales de la puerta del horno.

			30"				27"			
			Horno Simple		Horno Doble		Horno Simple		Horno Doble	
			ZTS90DS ZTSX1DS	ZTS90DP ZTSX1DP	ZTD90DS ZTDX1DS	ZTD90DP ZTDX1DP	ZKS90DS	ZKS90DP	ZKD90DS	ZKD90DP
1. Instalación con marco al ras en el área inferior										
Abertura	A	Ancho mínimo de la abertura con fugas laterales de 1/8"	30	30	30	30	27	27	27	27
	B	Altura mínima de la abertura con fuga superior de 1/8" y fuga inferior de 1/4"	29-1/16	29-1/16	51-9/16	51-9/16	29 -1/4	29 -1/4	51-9/16	51-9/16
	C	Profundidad mínima del espacio	24-15/16	24-15/16	24-15/16	24-15/16	24-15/16	24-15/16	24-15/16	24-15/16
Ristreles	D	Grosor del ristrele inferior – se extiende a lo largo de toda a profundidad del gabinete	11/16	11/16	11/16	11/16	11/16	11/16	11/16	11/16
	E	Grosor del ristrele lateral	3/4	3/4	3/4	3/4	1	1	1	1
	F	Grosor del ristrele superior	1-1/8	1-1/8	5/8	5/8	15/16	15/16	1-3/16	1-3/16
	G	Posicionado al fondo – todos los ristreles	1-3/8	1-7/16	1-3/8	1-7/16	1-3/8	1-7/16	1-3/8	1-7/16
Caja de Empalmes Eléctricos	J	Vertical desde la esquina superior derecha	5-1/4	5-1/4	5-1/4	5-1/4	5-1/4	5-1/4	5-1/4	5-1/4
	K	Horizontal desde la esquina superior derecha	9-1/2	9-1/2	9-1/2	9-1/2	9-1/2	9-1/2	9-1/2	9-1/2
2. Instalación con marco al ras de aluminio extruido										
			ZTSX1DS ZX30VT1*	ZTSX1DP ZX30VT1*	ZTDX1DS ZX30VT2*	ZTDX1DP ZX30VT2*	ZX27VT1*	ZX27VT1*	ZX27VT2*	ZX27VT2*
Abertura	L	Altura mínima de la abertura con fuga superior de 1/8" y fuga inferior de 1/8"	28-5/8	28-5/8	51-1/8	51-1/8	28-13/16	28-13/16	51-1/8	51-1/8
Ristreles	M	Grosor del ristrele inferior – se extiende a lo largo de toda a profundidad del gabinete	1/4	1/4	1/4	1/4	1/4	1/4	1/4	1/4

Todas las dimensiones son expresadas en pulgadas.

* Kits de Accesorios de Marcos vendidos a través del servicio de posventa únicamente