

TEMPLATE 1


TEMPLATE 2 - THIS SIDE IS FOR INSIDE OF CABINET

IMPORTANT

Read the installation instructions for complete instructions before beginning installation.  
Template must lie flat against the cabinet when locating the holes.

INSTRUCTIONS

(See installation instructions for complete instructions)

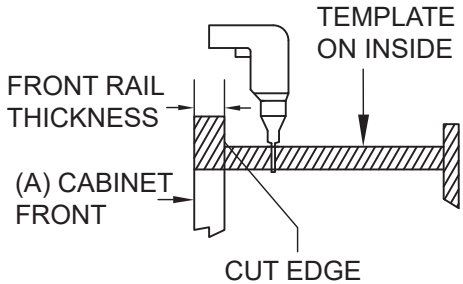


**PCHK11 Series Models Only:**  
The front rail thickness cannot exceed 3/4".

IF YOU DRILL THE 4 MOUNTING HOLES FROM THE INSIDE SIDE OF THE CABINET, MEASURE THE THICKNESS OF THE FRONT RAIL AND CUT THAT AMOUNT OFF THE FRONT OF THE TEMPLATE. USE THE CUTTING LINES TO ENSURE A STRAIGHT CUT. PLACE THE CUT EDGE AGAINST THE BACK SIDE OF THE FRONT RAIL AND POSITION THE TEMPLATE FLAT AGAINST THE BOTTOM SIDE OF THE CABINET.


DRILL THE 1/4" DIA. AS DESCRIBED IN THE INSTALLATION INSTRUCTIONS.

IMPORTANT


MAKE SURE THAT THE LEFT AND RIGHT SIDES OF THE TEMPLATE (MICROWAVE SIDE A AND B) AGREE WITH THE EVENTUAL DESIRED LOCATION OF THE MOUNTED OVEN. DEPENDING ON WHETHER YOU CHOOSE TO DRILL FROM INSIDE THE CABINET (A) OR FROM THE BOTTOM SIDE OF THE CABINET (B), THE TEMPLATE SIDES MARKED "MICROWAVE SIDE A" OR "MICROWAVE SIDE B" WILL INDICATE THE LOCATION OF THE SIDES OF THE MOUNTED OVEN.

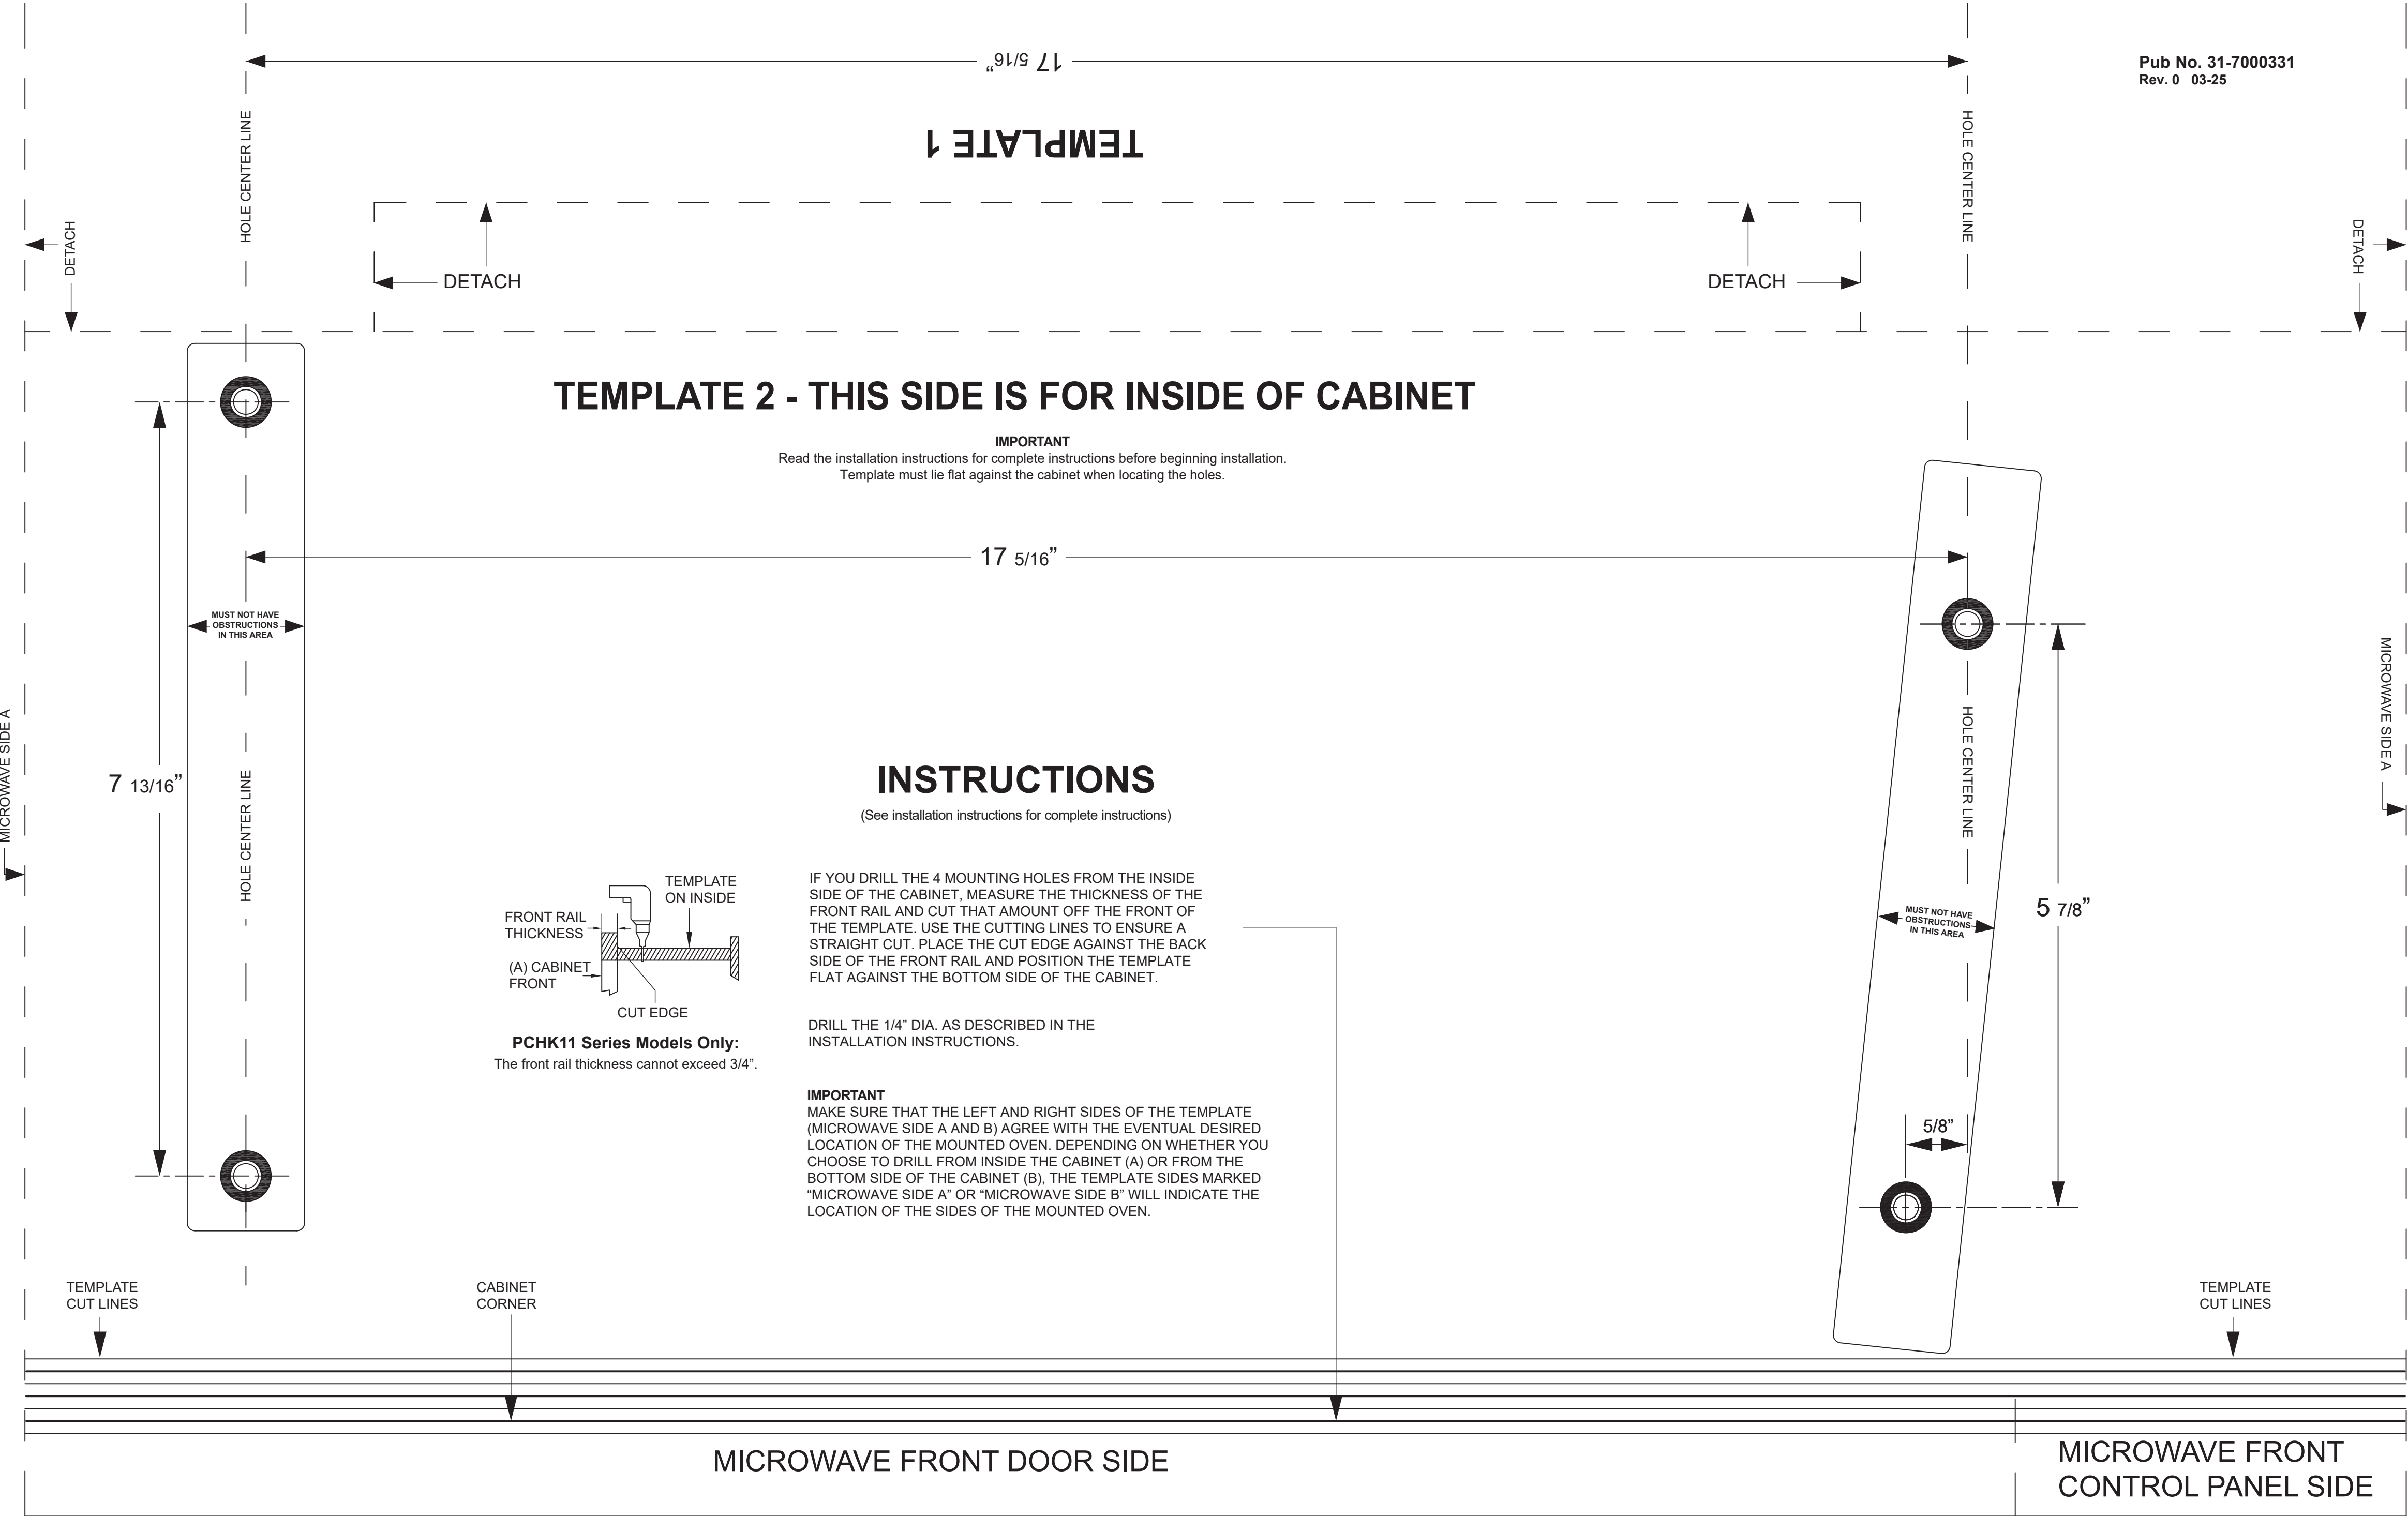

## TEMPLATE 1

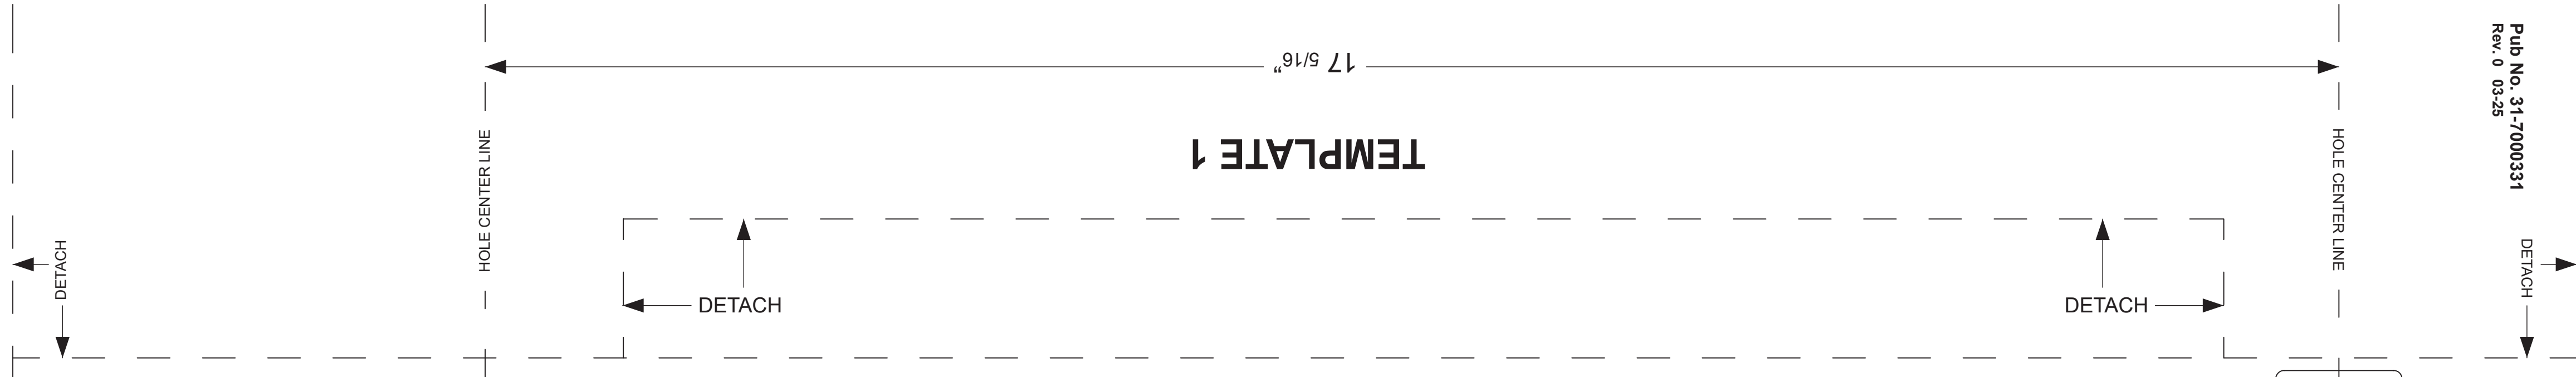

## TEMPLATE 2 - THIS SIDE IS FOR BOTTOM OF CABINET

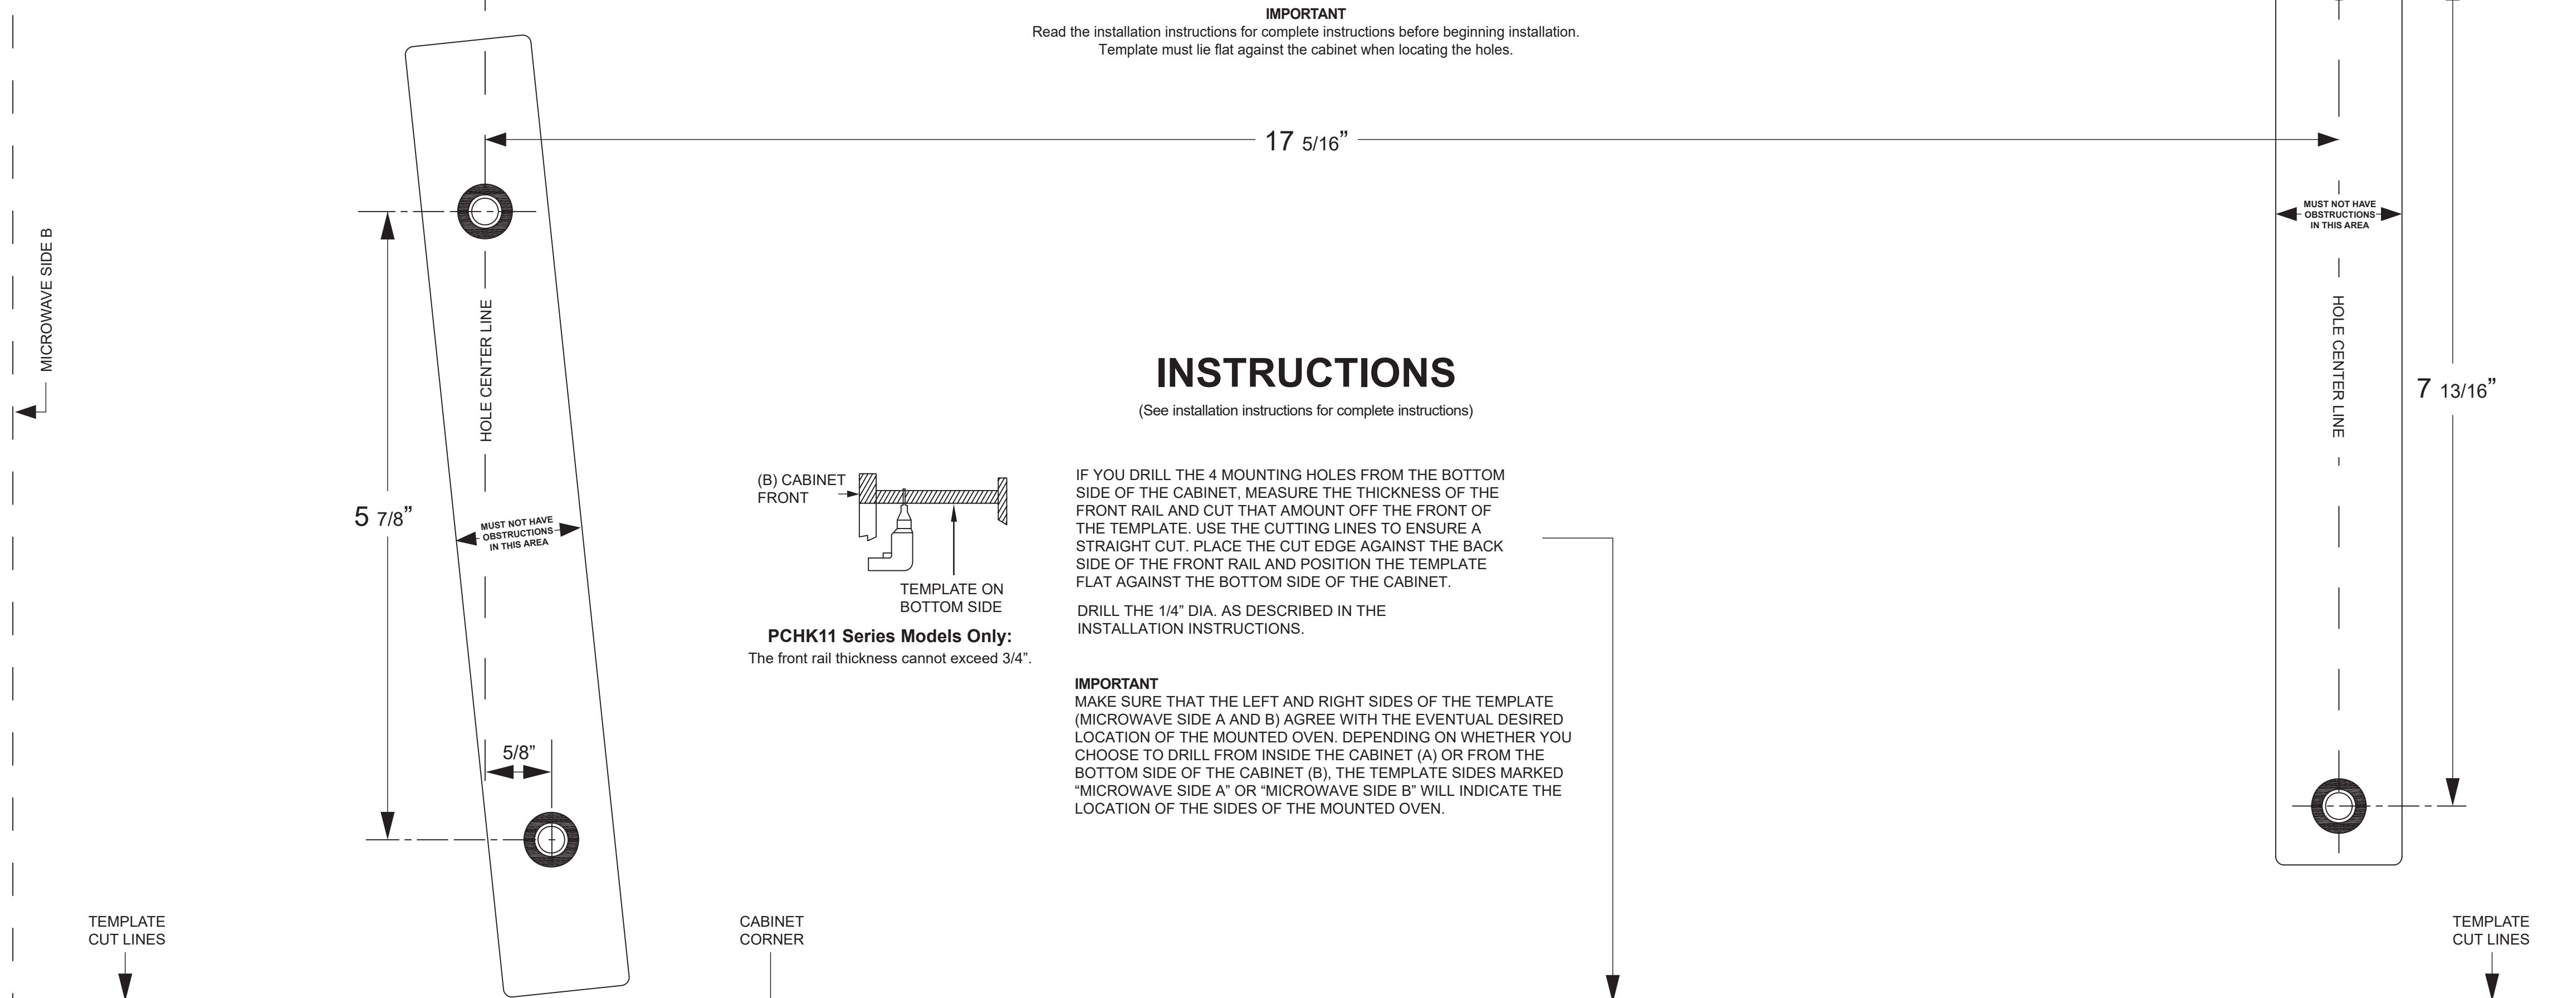

MICROWAVE FRONT  
CONTROL PANEL SIDE

MICROWAVE FRONT DOOR SIDE