
## **PROFESSIONAL HOODS**

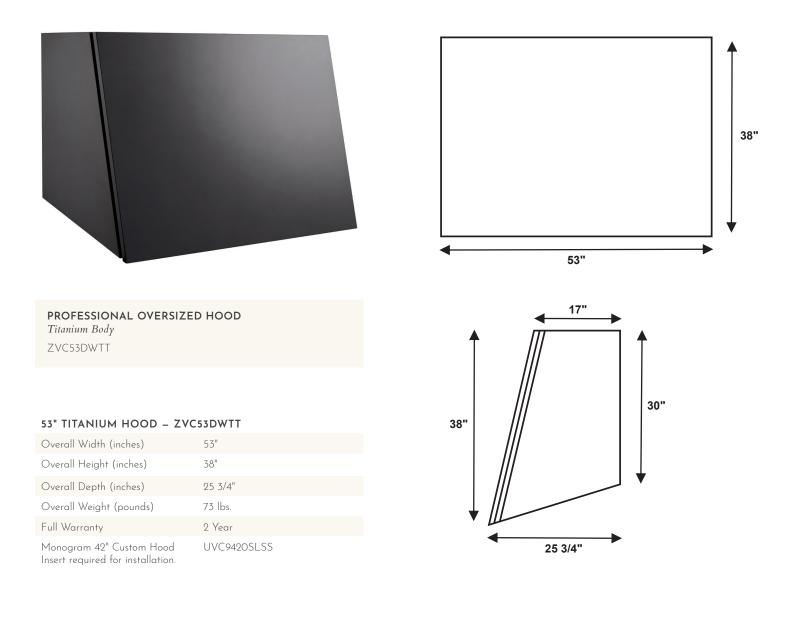



### CONTACT FIRSTBUILD.COM/INVENTIONS/MONOGRAM-HOOD-DUCT-COVER/


TO PURCHASE A HOOD DUCT COVER TO PAIR WITH YOUR MONOGRAM HOOD.

# **PROFESSIONAL HOODS INSTALLATION**

MONOGRAM Designer collection


This hood is designed to be installed onto a wall. Install this hood 30" minimum to 36" maximum above the cooking surface. **NOTE**: Clearances may vary due to type of cooking product and local codes. Check with local inspectors to be sure standard is applicable.

### TOP VENT INSTALLATION

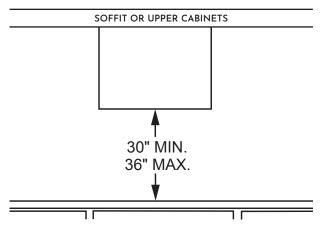

In this installation, the ductwork running from the top of the hood will be concealed in the soffit or upper cabinetry.

### BACK VENT INSTALLATION

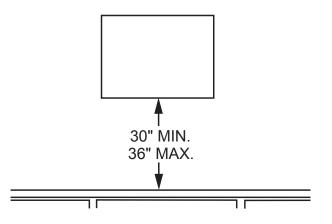

In this installation, the ductwork running from the back of the hood goes directly into the wall.