Installation Instructions

Above the Cooktop Oven


Model JVM2052

Questions? Call 800.GE.CARES (800.432.2737) or Visit our Website at: GEAppliances.com

BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **IMPORTANT** Save these instructions for local inspector's use.
- **IMPORTANT** Observe all governing codes and ordinances.
- Note to Installer Be sure to leave these instructions with the Consumer.
- Note to Consumer Keep these instructions for future reference.
- Skill level Installation of this appliance requires basic mechanical and electrical skills.
- Proper installation is the responsibility of the installer.
- Product failure due to improper installation is not covered under the Warranty.

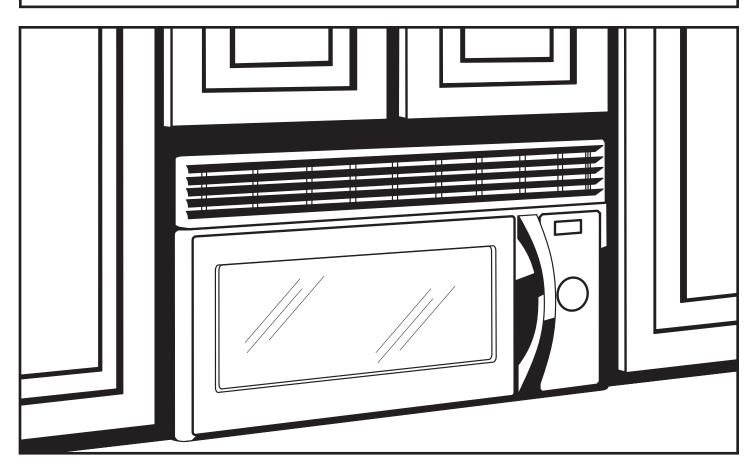

READ CAREFULLY. KEEP THESE INSTRUCTIONS.

MFL57007101

49-40587-1

Installation Instructions

CONTENTS

General information	
Important Safety Instructions 3	5
Electrical Requirements 3	5
Hood Exhaust 4–5	5
Damage – Shipment/Installation6	5
Parts Included6	5
Tools You Will Need7	,
Mounting Space7	,


Step-by-step installation guide

Placement of Mounting Plate 8–10
Removing the Mounting Plate
Finding the Wall Studs
Determining Wall Plate Location
Aligning the Wall Plate10
Installation Types 11–22
A Outside Top Exhaust 12–14
Attach Mounting Plate to Wall12
Preparation of Top Cabinet13
Attach Exhaust Damper13
Mount the Microwave Oven13, 14
B Outside Back Exhaust 15–18
Prepare Rear Wall for Outside Back Exhaust 15
Attach Mounting Plate to Wall16
Preparation of Top Cabinet16
Adapt Microwave Oven Blower for Outside Back Exhaust 16, 17
Mount the Microwave Oven 18

С	Recirculating 19-2	22
	Attach Mounting Plate to Wall	19
	Preparation of Top Cabinet	19
	Adapt Microwave Oven Blower for Recirculation	20
	Mount the Microwave Oven	21
	Install the Charcoal Filter	22
Before	e You Use Your Microwave Oven	23

IMPORTANT SAFETY INSTRUCTIONS


A qualified electrician must perform a ground continuity check on the wall receptacle before beginning the installation to ensure that the outlet box is properly grounded. If not properly grounded, or if the wall receptacle does not meet electrical requirements noted (under ELECTRICAL REQUIREMENTS), a qualified electrician should be employed to correct any deficiencies.

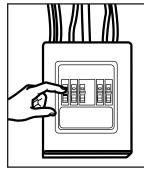

AWARNING:

Risk of Electric Shock. Can cause injury or death: Remove house fuse or open circuit breaker before beginning installation to avoid severe or fatal shock injury.

A WARNING: Risk of Electric Shock. Can cause injury or death: THIS APPLIANCE MUST BE PROPERLY GROUNDED to avoid severe or fatal shock.

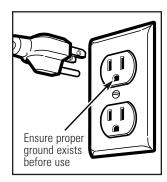

The power cord of this appliance is equipped with a three-prong (grounding) plug which mates with a standard three-prong (grounding) wall receptacle to minimize the possibility of electric shock hazard from this appliance.

Where a standard two-prong wall receptacle is encountered, it must be replaced with a properly grounded three-prong wall receptacle, installed by a qualified electrician.

A WARNING: Risk of Electric Shock. Can cause injury or death: DO NOT, under any circumstances, cut, deform or remove any of the prongs from the power cord. Do not use with an extension cord. Failure to comply may cause fire.

ELECTRICAL REQUIREMENTS

Product rating is 120 volts AC, 60 Hertz, 14 amps and 1.70 kilowatts. This product must be connected to a supply circuit of the proper voltage and frequency. Wire size must conform to the requirements of the National Electrical Code or the prevailing local code for this kilowatt rating. The power supply cord and plug should be brought to a separate 15 to 20 ampere branch circuit single grounded outlet. The outlet box should be located in the cabinet above the oven. The outlet box and supply circuit should be installed by a qualified electrician and conform to the National Electrical Code or the prevailing local code.

A CAUTION: For personal safety, the mounting surface must be capable of supporting the cabinet load, in addition to the added weight of this 63–85 pound product, plus additional oven loads of up to 50 pounds or a total weight of 113–135 pounds.

A CAUTION: For personal safety, this product cannot be installed in cabinet arrangements such as an island or a peninsula. It must be mounted to BOTH a top cabinet AND a wall.

A CAUTION: To avoid the risk of personal injury (back injury or other injuries due to excessive weight of the microwave oven) or property damage, you will need two people to install this microwave oven.

HOOD EXHAUST

NOTE: Read these next two pages only if you plan to vent your exhaust to the outside. If you plan to recirculate the air back into the room, proceed to page 6.

OUTSIDE TOP EXHAUST (EXAMPLE ONLY) The following chart describes an example of one possible ductwork installation.							
	DUCT PIECES		EQUIVALENT LENGTH	×	NUMBER USED	=	EQUIVALENT LENGTH
		Roof Cap	24 Ft.	Х	(1)	=	24 Ft.
		12 Ft. Straight Duct (6"Round)	12 Ft.	Х	(1)	=	12 Ft.
		Rectangular-to-Round Transition Adapter*	5 Ft.	Х	(1)	=	5 Ft.
	Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood. Total Length = 41 Ft.						

***IMPORTANT:** If a rectangular-to-round transition adapter is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper.

OUTSIDE BACK EXHAUST (EXAMPLE ONLY)

The following chart describes an example of one possible ductwork installation.

Π	DUCT PIECES		EQUIVALENT LENGTH*	×	NUMBER USED	=	EQUIVALENT LENGTH
FP A		Wall Cap	40 Ft.	х	(1)	=	40 Ft.
H		3 Ft. Straight Duct (3¼" x 10" Rectangular)	3 Ft.	Х	(1)	=	3 Ft.
		90° Elbow	10 Ft.	х	(2)	=	20 Ft.
	Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood. Total Length = 63 Ft.					63 Ft.	

NOTE: For back exhaust, care should be taken to align exhaust with space between studs, or wall should be prepared at the time it is constructed by leaving enough space between the wall studs to accommodate exhaust.

Installation Instructions

NOTE: If you need to install ducts, note that the total duct length of $3\frac{1}{4}$ " x 10" rectangular or 6" diameter round duct **should not exceed 120 equivalent feet.**

Outside ventilation requires a HOOD EXHAUST DUCT. Read the following carefully.

NOTE: It is important that venting be installed using the most direct route and with as few elbows as possible. This ensures clear venting of exhaust and helps prevent blockages. **Also, make sure dampers swing freely and nothing is blocking the ducts.**

Exhaust connection:

The hood exhaust has been designed to mate with a standard $3\frac{1}{4}$ x 10" rectangular duct.

If a round duct is required, a rectangular-to-round transition Adapter must be used. **Do not use less than a 6" diameter duct.**

Maximum duct length:

For satisfactory air movement, the total duct length of $3\frac{1}{4}$ " x 10" rectangular or 6" diameter round duct **should not exceed 120 equivalent feet.**

Elbows, transitions, wall and roof caps, etc.,

present additional resistance to airflow and are equivalent to a section of straight duct which is longer than their actual physical size. When calculating the total duct length, add the equivalent lengths of all transitions and adapters plus the length of all straight duct sections. The chart below shows you how to calculate total equivalent ductwork length using the approximate feet of equivalent length of some typical ducts.

DUCT PIECES		EQUIVALENT LENGTH	×	NUMBER USED	=	EQUIVALENT LENGTH
	Rectangular-to-Round Transition Adapter*	5 Ft.	Х	()	Ξ	Ft.
	Wall Cap	40 Ft.	Х	()	=	Ft.
	90° Elbow	10 Ft.	х	()	=	Ft.
	45° Elbow	5 Ft.	х	()	=	Ft.
	90° Elbow	25 Ft.	Х	()	=	Ft.
	45° Elbow	5 Ft.	Х	()	=	Ft.
	Roof Cap	24 Ft.	х	()	=	Ft.
	Straight Duct 6" Round or 31⁄4" x 10" Rectangular	1 Ft.	Х	()	=	Ft.
				Total Ductv	vork =	Ft.



* **IMPORTANT:** If a rectangular-to-round transition Adapter is used, the bottom corners of the damper will have to be cut to fit, using the tin snips, in order to allow free movement of the damper. Equivalent lengths of duct pieces are based on actual tests and reflect requirements for good venting performance with any vent hood.

DAMAGE – SHIPMENT/ INSTALLATION

- If the unit is damaged in shipment, return the unit to the store in which it was bought for repair or replacement.
- If the unit is damaged by the customer, repair or replacement is the responsibility of the customer.
- If the unit is damaged by the installer (if other than the customer), repair or replacement must be made by arrangement between customer and installer.

PARTS INCLUDED

HARDWARE PACKET

PART		QUANTITY
≪annunnum⊳	Lag Screws (1⁄4" x 2") (for wall stud holes)	4
¢,	Toggle Bolts (1¼" x 3") (for drywall holes)	4
	Spring Toggle Heads (for toggle bolts)	4
	Bolts (for securing to the upper cabinet)	2
Ann	Tapping Screws (½"x ½") (for attaching the damper duct connector)	1 black 2 bronze
	Power Cord Clamp and Dark-Colored Mounting Screw (to hold the power cord)	1

You will find the installation hardware contained in a packet with the unit. Check to make sure you have all these parts.


NOTE: Some extra parts are included.

NOTE: You need to install at least two lag screws into a $2" \times 4"$ stud and four anchor bolts into the wall. Also, the mounting area must meet the 150 lbs. weight requirement.


PARTS INCLUDED

ADDITIONAL PARTS

PART		QUANTITY
	Upper Cabinet Template	1
Original State Image: State Original State Image: State	Rear Wall Template (3 pieces mounting plate only)	1
INSTALLATION INSTRUCTIONS	Installation Instructions	1
	Exhaust Adapter	1
	Damper	1
	Power Cord Clamp Bushing (for the cord hole in a metal upper cabinet)	1

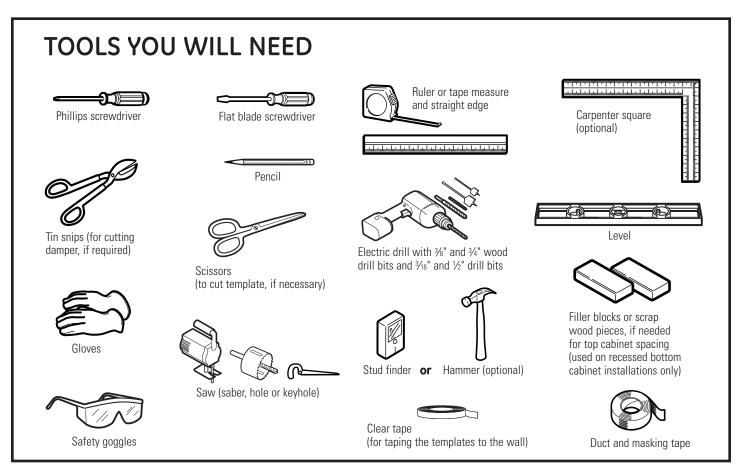

MOUNTING SPACE

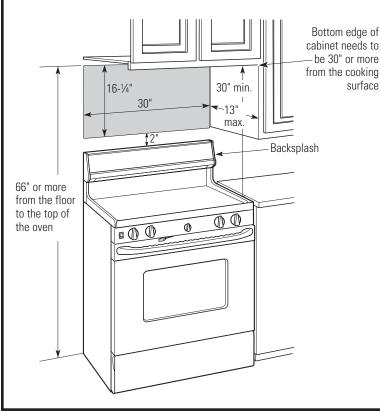


NOTES:


- The space between the cabinets must be 30" wide and free of obstructions.
- If the space between the cabinets is greater than 30", a Filler Panel Kit may be used to fill in the gap between the oven and the cabinets. Your Owner's Manual contains the kit number for your model.
- This oven is for installation over ranges up to 36" wide.
- If you are going to vent your oven to the outside, see Hood Exhaust Section for exhaust duct preparation.
- When installing the oven beneath smooth, flat cabinets, be careful to follow the instructions on the upper cabinet template for power cord clearance.
- Maximum cabinet depth above and beside the unit is 13".
- For models with top venting holes: Do not allow cabinetry or other objects to block the airflow of the vent.

1 PLACEMENT OF THE MOUNTING PLATE

A REMOVING THE MICROWAVE OVEN FROM THE CARTON/ REMOVING THE MOUNTING PLATE


- **1** Remove the installation instructions, filters, glass tray and the small hardware bag. Do not remove the Styrofoam protecting the front of the oven.
- 2 Fold back all 4 carton flaps fully against carton sides. Then carefully roll the oven and carton over onto the top side. The oven should be resting in the Styrofoam.

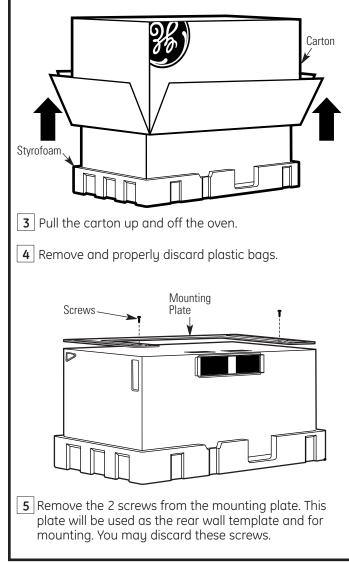


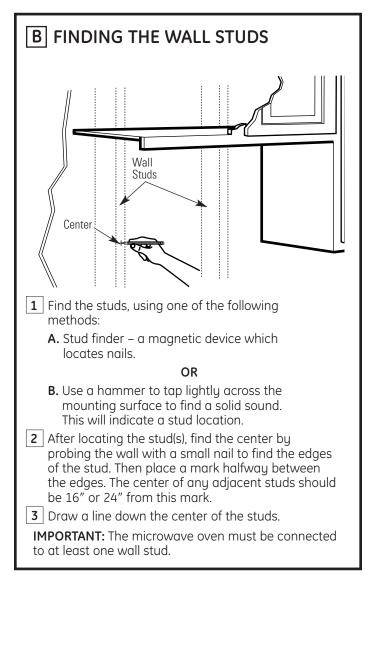


C DETERMINING WALL PLATE LOCATION UNDER YOUR CABINET

Plate position – beneath flat bottom cabinet

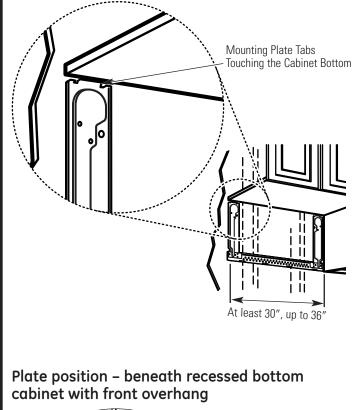

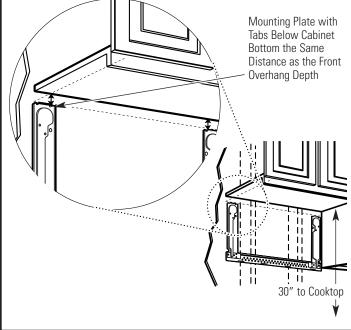

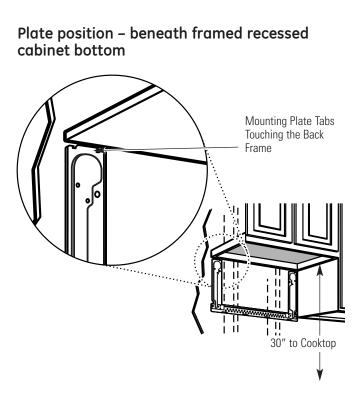


Your cabinets may have decorative trim that interferes with the microwave oven installation. Remove the decorative trim to install the microwave oven properly and to make it level.

THE MICROWAVE OVEN MUST BE LEVEL.

Use a level to make sure the cabinet bottom is level.

If the cabinets have a front overhang only, with no back or side frame, install the mounting plate down the same distance as the front overhang depth. This will keep the microwave oven level.

- **1** Measure the inside depth of the front overhang.
- 2 Draw a horizontal line on the back wall an equal distance below the cabinet bottom as the inside depth of the front overhang.
- **3** For this type of installation with front overhang only, align the mounting tabs with this horizontal line, not touching the cabinet bottom as described in Step D.

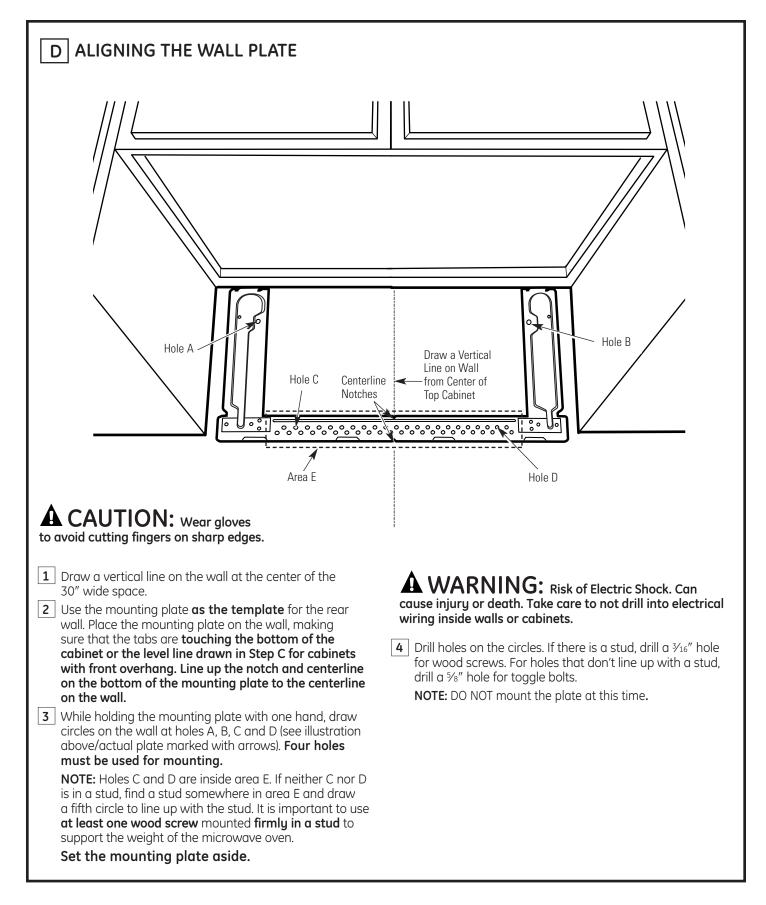

2 INSTALLATION TYPES (Choose A, B or C)


This microwave oven is designed for adaptation to the following three types of ventilation:

- A. Outside Top Exhaust (Vertical Duct)
- B. Outside Back Exhaust (Horizontal Duct)
- C. Recirculating (Non-Vented Ductless)


NOTE: This microwave oven is shipped assembled for Outside Top Exhaust (except for non-vented models). Select the type of ventilation required for your installation and proceed to that section.



OUTSIDE TOP EXHAUST (VERTICAL DUCT)




OUTSIDE BACK EXHAUST (HORIZONTAL DUCT)

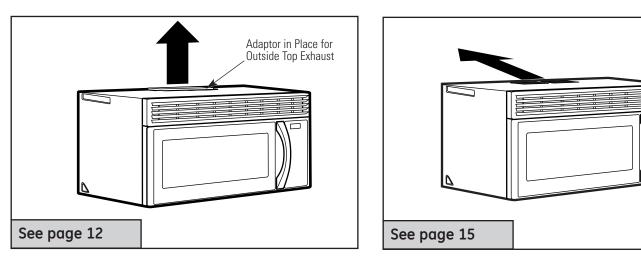




RECIRCULATING (NON-VENTED DUCTLESS)

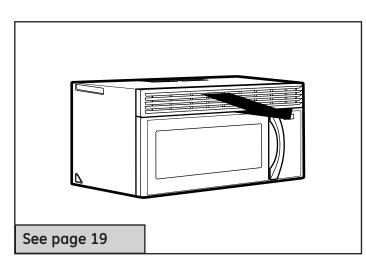

A Charcoal Filter Accessory Kit is required for the non-vented exhaust. (See your Owner's Manual for the kit number.)


A OUTSIDE TOP EXHAUST (Vertical Duct)

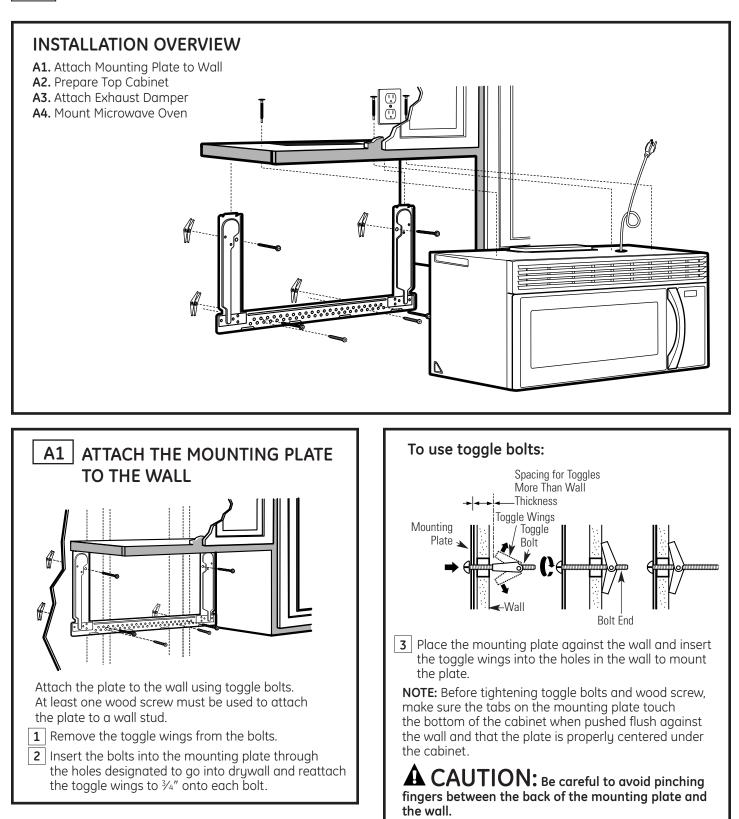

4 Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.


A2 USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET

You need to drill holes for the top support screws, a hole large enough for the power cord to fit through, and a cutout large enough for the exhaust adaptor.

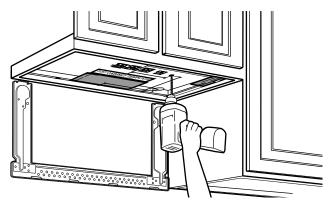

- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.

A CAUTION: Wear safety goggles when drilling holes in the cabinet bottom.

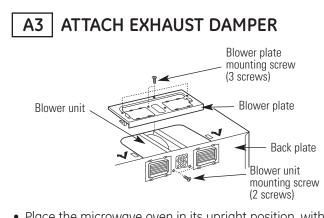

- Place the microwave oven in its upright position, with the top of the unit facing up.
- This microwave oven is shipped assembled for top exhaust.
- Attach the exhaust adapter to the blower plate by sliding it into the guide.
- You will need to make adjustments to ensure proper alignment with your house exhaust duct after the microwave oven is installed.

A4 MOUNT THE MICROWAVE OVEN





A CAUTION: To avoid the risk of personal injury (back injury or other injuries due to excessive weight of the microwave oven) or property damage, you will need two people to install this microwave oven.

IMPORTANT: Do not grip or use handle during installation.


A WARNING: Risk of Electric Shock. Can cause injury or death: If installing unit with metal countertops, cover the edge of the power supply cord hole with the power supply cord bushing.

IMPORTANT: If filler blocks are not used, case damage may occur from overtightening screws.

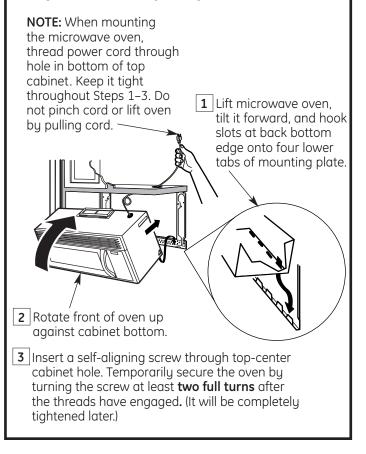

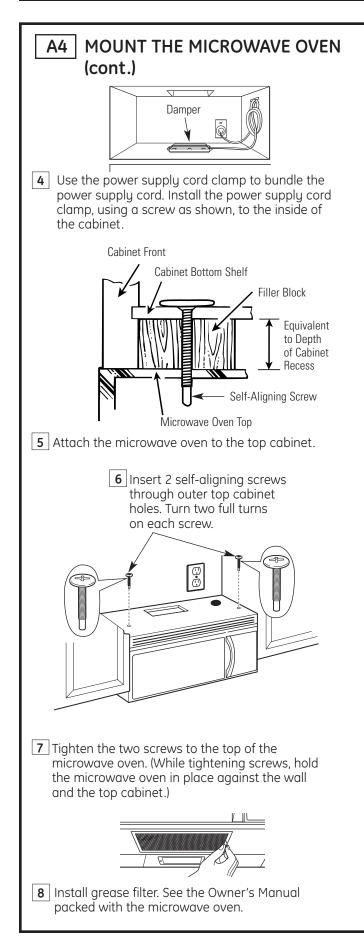


B OUTSIDE BACK EXHAUST (Horizontal Duct)

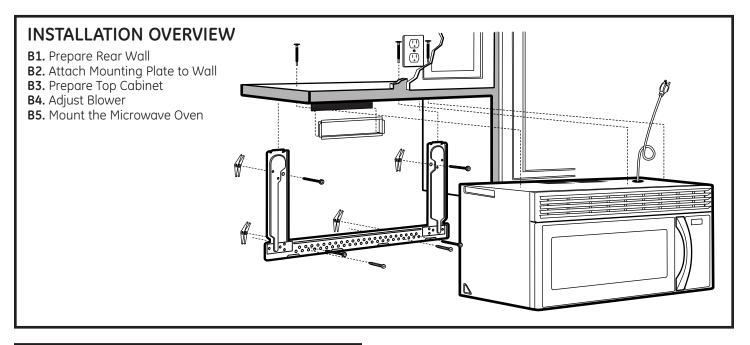



B1 PREPARE THE REAR WALL FOR OUTSIDE BACK EXHAUST


You need to cut an opening in the rear wall for outside exhaust.

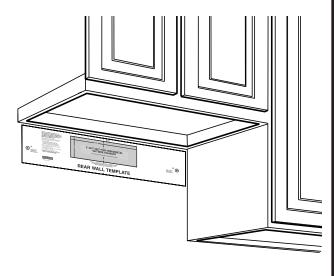

- Read the instructions on the REAR WALL TEMPLATE.
- Tape it to the rear wall, lining up with the holes previously drilled for holes A and B in the wall plate.
- Cut the opening, following the instructions of the REAR WALL TEMPLATE.

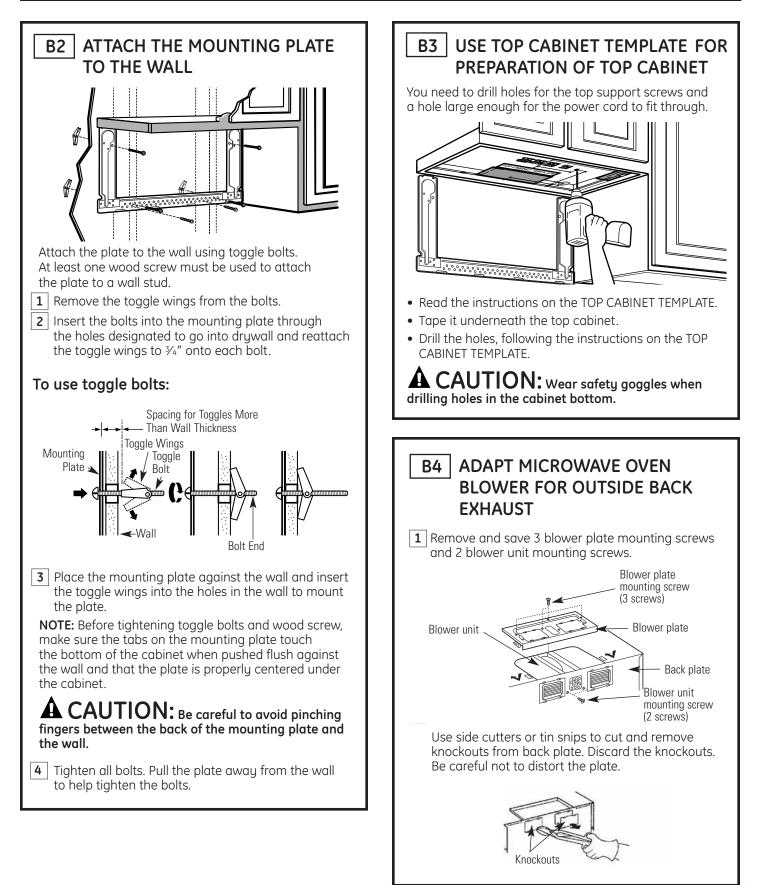

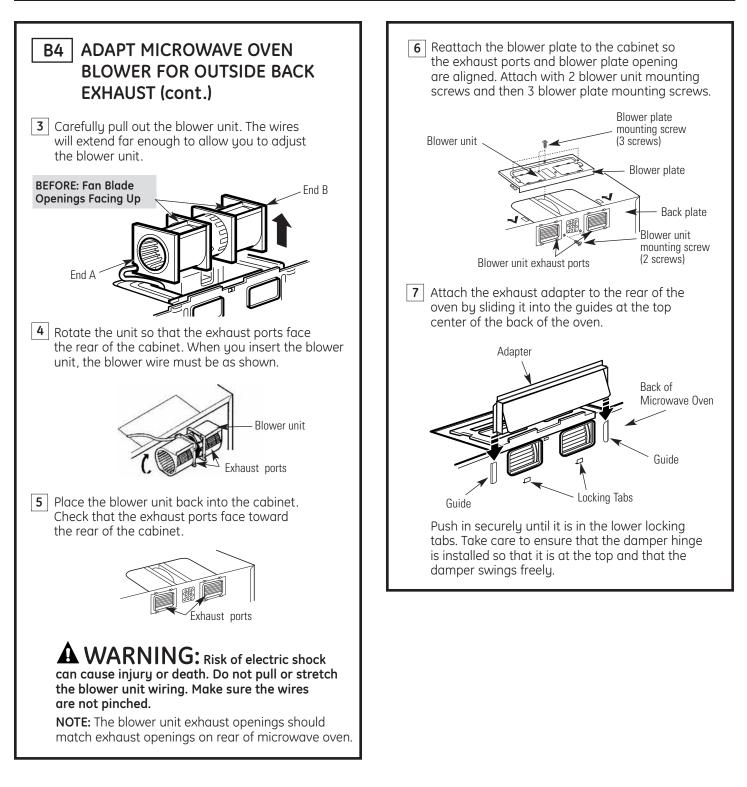


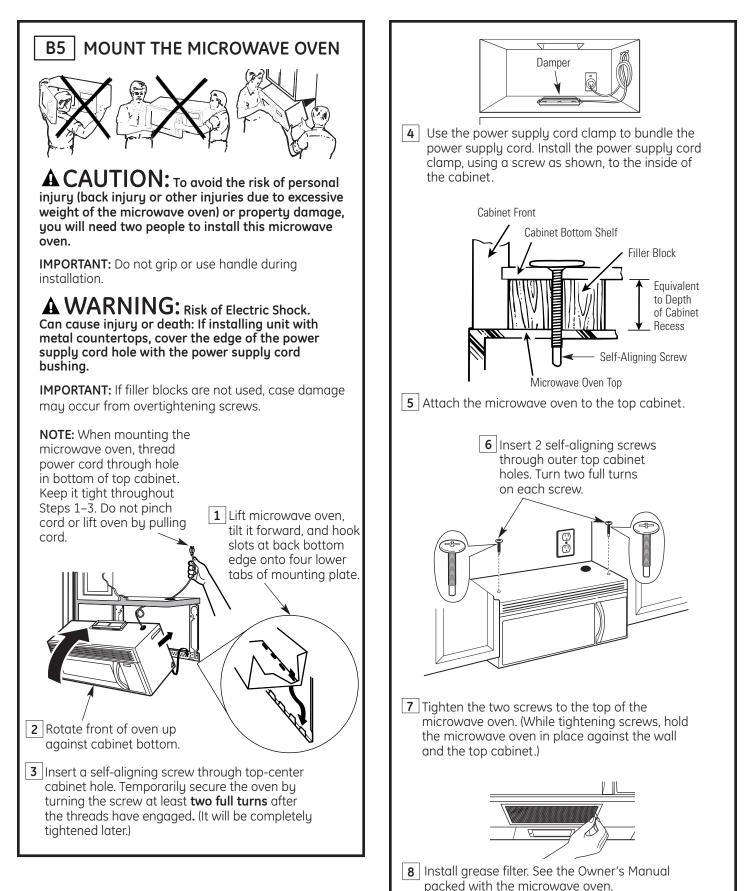


C RECIRCULATING (Non-Vented Ductless)


INSTALLATION OVERVIEW

- **C1.** Attach Mounting Plate to Wall
- **C2.** Prepare Top Cabinet
- C3. Adjust Blower
- C4. Mount the Microwave Oven
- C5. Install Charcoal Filter

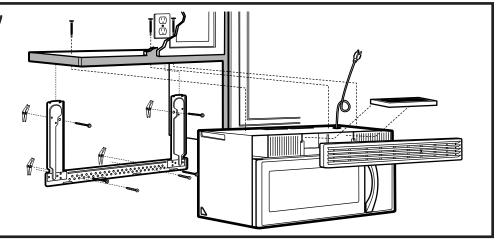

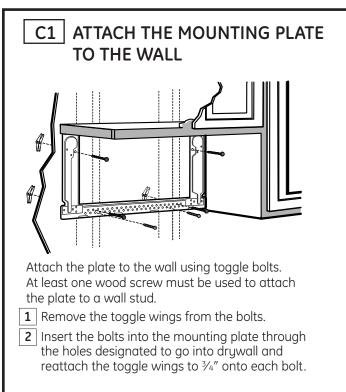

To use toggle bolts:

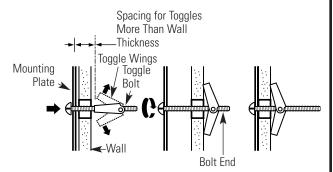

3 Place the mounting plate against the wall and insert the toggle wings into the holes in the wall to mount the plate.

NOTE: Before tightening toggle bolts and wood screw, make sure the tabs on the mounting plate touch the bottom of the cabinet when pushed flush against the wall and that the plate is properly centered under the cabinet.

A CAUTION: Be careful to avoid pinching fingers between the back of the mounting plate and the wall.

4 Tighten all bolts. Pull the plate away from the wall to help tighten the bolts.

C2 USE TOP CABINET TEMPLATE FOR PREPARATION OF TOP CABINET


You need to drill holes for the top support screws and a hole large enough for the power cord to fit through.





- Read the instructions on the TOP CABINET TEMPLATE.
- Tape it underneath the top cabinet.
- Drill the holes, following the instructions on the TOP CABINET TEMPLATE.

ACAUTION: Wear safety goggles when drilling holes in the cabinet bottom.

Installation Instructions

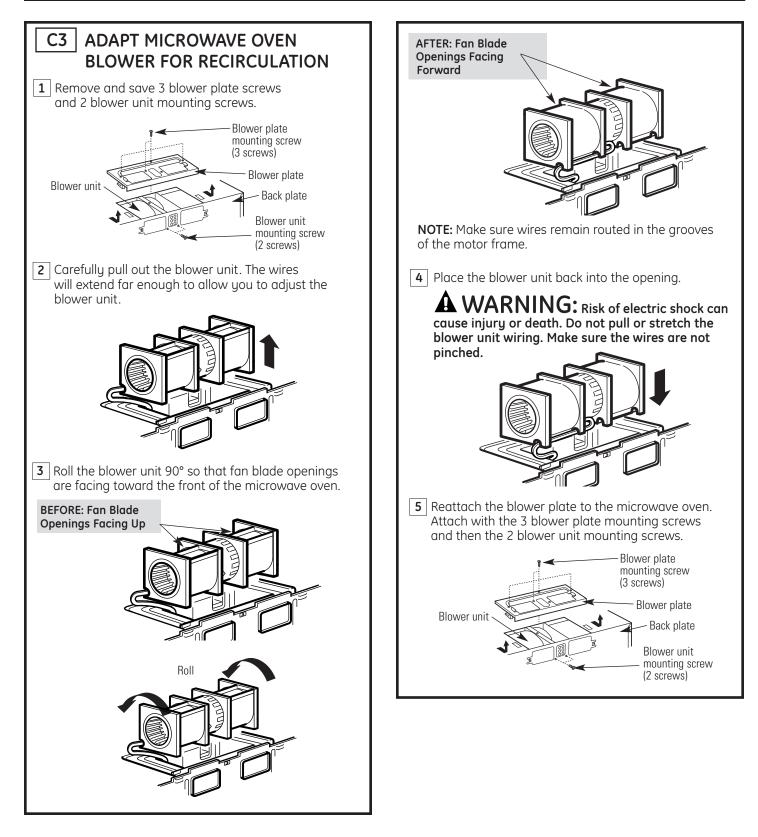

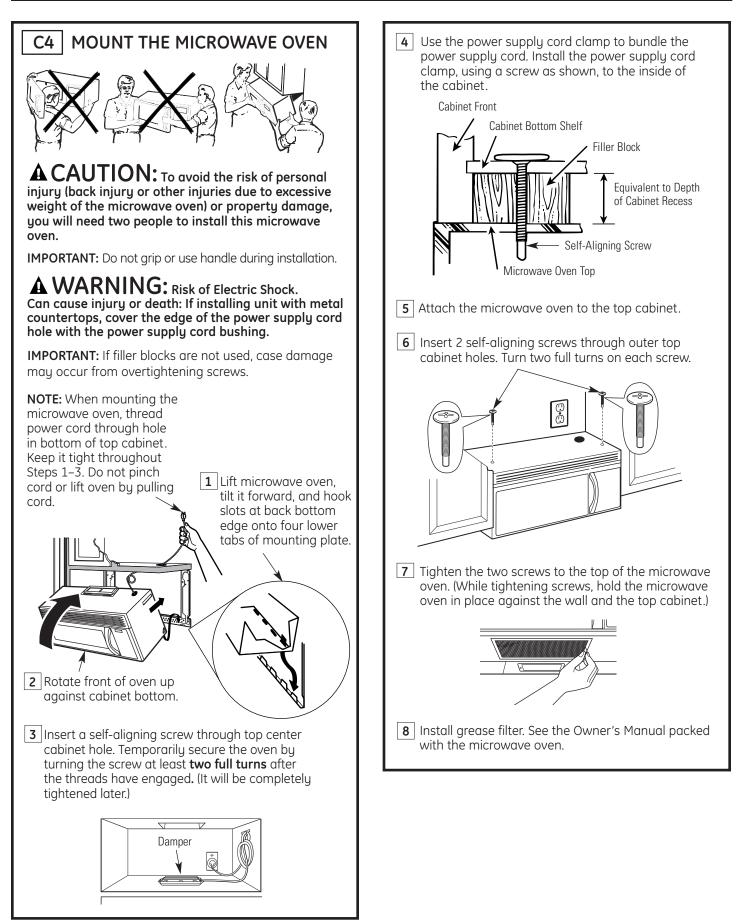

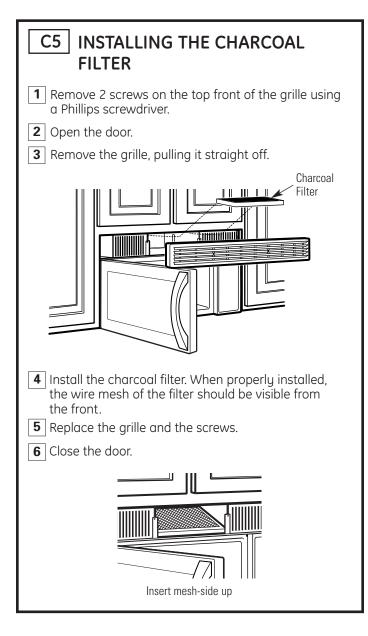

BEFORE YOU USE YOUR MICROWAVE OVEN

1 Make sure the microwave oven has been installed according to instructions.	6 Read the Owner's Manual. OWNER'S MANUAL
2 Remove all packing material from the microwave oven.	7 KEEP INSTALLATION INSTRUCTIONS FOR THE LOCAL INSPECTOR'S USE.
3 Install turntable and ring in cavity.	INSTALLATION INSTRUCTIONS
4 Replace house fuse or turn breaker back on.	
5 Plug power cord into a dedicated 15- to 20-amp electrical outlet.	