PSHW6YGZ GE Profile™ ENERGY STAR® 25.6 Cu. Ft. Stainless-Wrapped Side-by-Side Refrigerator

Dimensions and Installation Information (in inches)

Overall Dimensions	Height to top of hinge (in.) A	69-1/4*
	Height to top of case (in.) B	68-3/4
	Case depth without door (in.) C [†]	28
	Case depth less door handle (in.) \mathbf{D}^{\dagger}	32-3/8
	Case depth with door handle (in.) ${f E}^{\dagger}$	35
	Depth with fresh food door open 90° (in.) \mathbf{F}^{\dagger}	50-1/8
	Width (in.) G	36
	Width with door open 90° inc. door handle (in.) ${f H}$	43-1/2
Air Clearances	Each side (in.)	1/8
	Top (in.)	1
	Back (in.)	1

*When cap is removed: 69-1/4"

†Water hook-up fits in back air clearance when calculating installation depth.

If installed against a wall, allow clearance of 14-3/16" on freezer side to remove bin.


Clearance required to remove fresh food full-size pan without disassembling is 18-15/16".


Allow additional space for any necessary leveling adjustments.

For answers to your Monogram,[®] GE Profile[™] or GE[®] appliance questions, visit our website at ge.com or call GE Answer Center[®] service, 800.626.2000.



imagination at work

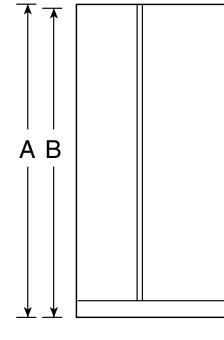

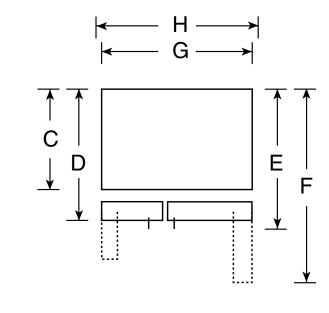

Top View





As an ENERGY STAR® partner, GE has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

210306

PSHW6YGZ GE Profile™ ENERGY STAR® 25.6 Cu. Ft. Stainless-Wrapped Side-by-Side Refrigerator

To Remove Top Caps and Doors on PSHW6YGX

Step 1: the refrigerator. Remove two screws, one on each side at the rear of the top cap. Lift off and remove top cap.

Step 2: Open both doors. Remove one screw on each side of the toekick. Pull forward to remove toekick.

Step 3: On the freezer door, disconnect water line coupler by pushing against the collar on the left side. Disconnect wire harness.


Step 4: Use a Torx T-20 screwdriver to remove 2 screws holding the top hinge. Carefully remove hinge while supporting door. Lift door up and off bottom hinge. Remove fresh food door in the same manner. Note: Do not remove bottom hinges! Door alignment will be difficult if bottom hinges are removed.

Step 5: Place refrigerator onto a hand truck, upright and against one side. Move refrigerator to the installation location.

Step 6: Carefully lower doors onto bottom hinges. Be sure to route the tubing and electrical connector through the bottom hinge. Reinstall top hinges.

Step 7: Place cap over the top of the refrigerator. Reinstall the original screws in the top and back of the cap.

Step 8: Reconnect the wiring harness and waterline.

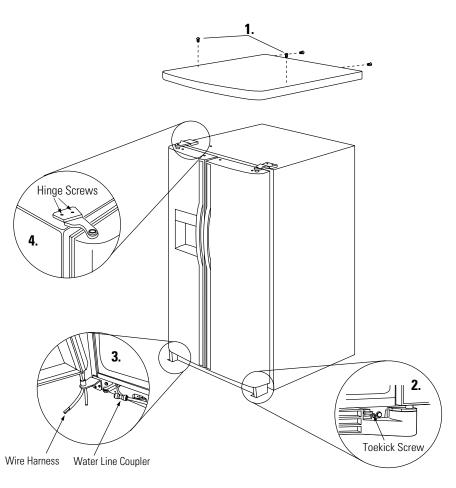

For answers to your Monogram,[®] GE Profile[™] or GE[®] appliance questions, visit our website at ge.com or call GE Answer Center[®] service, 800.626.2000.



imagination at work







As an ENERGY STAR® partner, GE has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

PSHW6YGZ GE Profile™ ENERGY STAR® 25.6 Cu. Ft. Stainless-Wrapped Side-by-Side Refrigerator

Features and Benefits

- Stainless-wrapped exterior The smooth exterior is complemented by stylish contours and designer touches
- ClimateKeeper2[™] system Electronic controls, multiple electronic sensors and a multi-flow air system help keep foods fresh longer
- Angled ALL LED lighting in fresh food and freezer Brightly illuminates every inch of the fresh food and freezer compartments
- Color LCD controls with touch screen LCD controls are easy to see and easy to use for all your refrigerator functions
- Integrated dispenser with LED lighting, PreciseFill and UltraFlow100 Dispenses accurate water amounts and pours up to 100 ounces per minute
- Electronic beverage center Keep beverages 2-3 degrees colder by monitoring with an electronic sensor
- CustomCool[™] technology Full-extension drawer chills in minutes, thaws in hours and quickly preserves food
- Slide 'n Store™ freezer baskets Full-extension baskets slide well beyond the door for easy access to all your frozen favorites
- Quick Ice[™] setting Speed up your icemaker to keep up with your life
- TurboCool™ setting Restores proper temperature to the refrigerator after frequent door openings
- Arctica® icemaker Holds up to 10 lbs of ice, so there's enough for all occasions
- Tilt-out freezer door bins Even when bins are filled to capacity, items are easy to remove
- Integrated shelf support system Strong shelf supports add a contemporary look
- Model PSHW6YGZSS Stainless steel





imagination at work

