



Use and Care & Installation Guide

Air Conditioner



Safety instructions3



Operating **Instructions, Tips**

Air Direction6
Control Settings5, 6
Energy-Saving Tips3



Care and Cleaning

Air Filter.....7
Front Grille Removal7
Grille and Cabinet6
Condenser Coils.....6
User Maintenance6, 7



Problem Solver..... 14

More questions ?...call

GE Answer Center® 800.626.2000



Installation

Electrical Requirements4
Extension Cords4
Grounding.....4
Installation Instructions.....7-13



Consumer Services15

Appliance Registration2

Important Phone Numbers..... 15

Model and Serial Number Location2

WarrantyBack Cover

Models: ASV06, ASV08, ASV10



HELP US HELP YOU

Before using your air conditioner, read this book carefully.

It is intended to help you operate and maintain your new air conditioner properly.

Keep it handy for answers to your questions.

If you don't understand something or need more help, write (include your phone number):

Consumer Affairs
GE Appliances
Appliance Park
Louisville, KY 40225

Write down the model and serial numbers.

You'll find them on a label on the lower right hand side of the outer cabinet. They are also on the product nameplate located behind the front grille.

These numbers are also on the Consumer Product Ownership Registration Card that came with your air conditioner. Before sending in this card, please write these numbers here:

Model Number

Serial Number

Use these numbers in any correspondence or service calls concerning your air conditioner.

If you received a damaged air conditioner...

Immediately contact the dealer (or builder) that sold you the air conditioner.

Save time and money. Before you request service...

Check the Problem Solver section of this guide. It lists causes of minor operating problems that you can correct yourself.

IF YOU NEED SERVICE

To obtain service, see the Consumer Services page in the back of this guide.

We're proud of our service and want you to be pleased. If for some reason you are not happy with the service you receive, here are three steps to follow for further help.

FIRST, contact the people who serviced your appliance. Explain why you are not pleased. In most cases, this will solve the problem.

NEXT, if you are still not pleased, write all the details—including your phone number—to:

Manager, Consumer Relations
GE Appliances
Appliance Park
Louisville, KY 40225

FINALLY, if your problem is still not resolved, write:

Major Appliance Consumer
Action Panel
20 North Wacker Drive
Chicago, IL 60606

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions before using this appliance.



A W A - & W h e n using this appliance, always exercise basic safety precautions, including the following:

*Use **this appliance only for its intended purpose** as described in this Use and Care Guide.

• This air conditioner must be properly installed in accordance with the **Installation Instructions** before it is used. See grounding instructions.



Never unplug your air conditioner by **pulling on the power cord**. Always grip plug **firmly** and pull straight out from the receptacle.

• **Repair or replace immediately all electric service cords that have become frayed or otherwise damaged.** Do not use a cord that shows **cracks** or abrasion damage along its length or at either the plug or connector end.



• **Unplug your air conditioner before making any repairs.** NOTE: We strongly recommend that any servicing be performed by a **qualified individual**.


• **For your safety...do not store or use combustible materials, gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.**

SAVE THESE INSTRUCTIONS

ENERGY-SAVING TIPS

- Keep the air filter clean. (See the Care and Cleaning section.)
- For most efficient cooling, keep the ventilation control in the CLOSED position except when you want to allow a small amount of outdoor air to enter the room or exhaust air, smoke or odors from the room.
- Don't let the room get too hot. Whenever possible, turn the unit on before the room heats up. When heat is "stored up" in walls, furniture, rugs and draperies, your air conditioner takes longer to produce the desired comfort condition.
- Keep windows and doors closed. Cool, dry air escapes when they're open.

- Keep furnace floor registers and cold air returns closed. Cold air can easily escape through them.
- Don't let drapes or furniture block the front of the unit and restrict air flow when it is operating.
- It's best to operate your air conditioner at high speed during extremely hot weather.
- Keep the outdoor condenser coil clean. (See the Care and Cleaning section.)
- Turn the air conditioner off before vacations or extended absences from home.

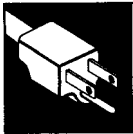

INSTALLATION INSTRUCTIONS

IMPORTANT: Leave these instructions with the appliance.

OWNER: Keep these instructions for future use.

Electrical Safety—IMPORTANT... Please Read Carefully

HOW TO CONNECT ELECTRICITY


**FOR PERSONAL SAFETY,
THIS APPLIANCE MUST BE
PROPERLY GROUNDED.**

ELECTRICAL REQUIREMENTS

The 115-volt models require a 115/120-volt a.c., 60 Hz grounded outlet protected with a 15-amp time delay fuse or circuit breaker.

The power cord on these models has a three-prong (grounding) plug that mates with a standard three-prong (grounding) wall outlet (Fig. 1) to minimize the possibility of electric shock hazard from these appliances.


Where a standard two-prong wall outlet is encountered, it is your personal responsibility and obligation to have it replaced with a properly grounded three-prong wall outlet.

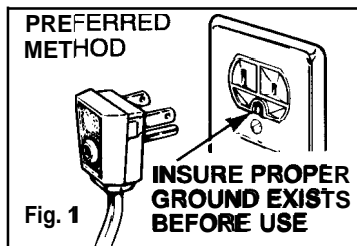

**DO NOT, UNDER ANY CIRCUMSTANCES,
CUT OR REMOVE THE THIRD (GROUND)
PRONG FROM THE POWER CORD.**

The 230/208-volt models require their own single branch circuit supplying 230/208-volt a.c., protected with a time delay fuse or circuit breaker. This is recommended for best performance and to prevent overloading house wiring circuits, which could cause a possible fire hazard from overheating wires.


The power cord on these models has a 230/208-volt perpendicular, tandem or large tandem-type plug that mates respectively with a 230/208-volt perpendicular, tandem or large tandem-type wall outlet. These types of outlets are available at most hardware stores.

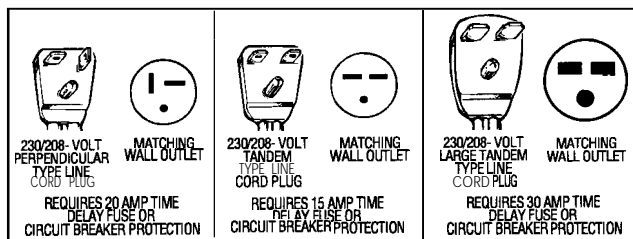

Whether your air conditioner is a 115-volt or a 230/208-volt unit, it is important to have the wall outlet and circuit checked by a qualified electrician if there is any doubt as to whether a proper ground exists.

Use of Adapter Plug (115-volt models only)

Because of potential safety hazards under certain conditions, we strongly recommend against use of an adapter plug. However, if you still elect to use an adapter, where local codes permit, a temporary connection may be made to a properly grounded two-prong wall outlet by use of a UL-listed adapter (Fig. 2) available at most local hardware stores.

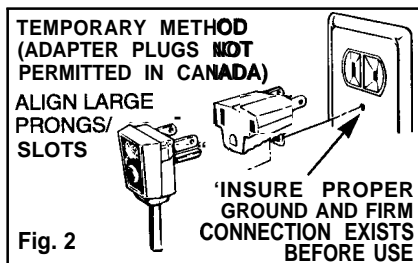

The larger slot in the adapter must be aligned with the larger slot in the wall outlet to provide proper polarity in the connection of the power cord.

CAUTION: Attaching the adapter ground terminal to wall outlet cover screw does not ground the appliance unless cover screw is metal, and not insulated, and wall outlet is grounded through house wiring. You should have the circuit checked by a qualified electrician to make sure the outlet is properly grounded.

When disconnecting the power cord from the adapter, always hold the adapter with one hand. If this is not done, the adapter ground terminal is very likely to break with repeated use.

Should the adapter ground terminal break, **DO NOT USE** the appliance until a proper ground has again been established.


USE OF EXTENSION CORDS

Because of potential safety hazards under certain conditions, we strongly recommend against the use of an extension cord. However, if you still elect to use an extension cord, it is absolutely necessary that it be a UL-listed 3-wire grounding type appliance extension cord and that the current carrying rating of the cord in amperes be equal to or greater than the branch circuit size shown on the rating nameplate of the appliance.

OPERATING YOUR CONTROLS




Thermostat Control

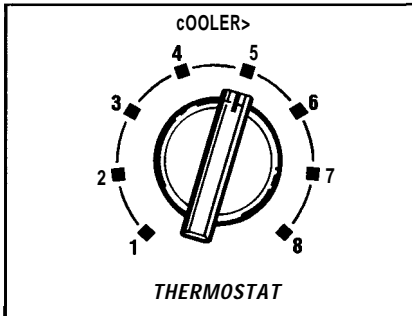

When you turn the Thermostat Control to the desired setting, the thermostat will automatically control the temperature of the indoor air. The higher the number selected, the cooler the room air will be.

The fuse may be blown or *the* circuit breaker may trip due to overload if the Thermostat control is turned from a “cooler” setting to a “warmer” setting and immediately reset to a “cooler” setting again. Wait at least three minutes before resetting the thermostat.

Selector Switch

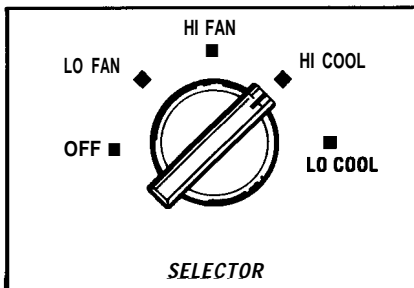

OFF turns air conditioner off.


LO FAN provides low fan speed operation without cooling.

HI FAN provides high fan speed operation without cooling.

HI COOL provides cooling with high fan speed operation.

LO COOL provides cooling with low fan speed operation.

Ventilation




When the slide switch is at the CLOSED position, the vent door is closed and only the air inside the room can be circulated and condition.

Slide the switch to the left to the OPEN position and the vent door opens to allow air, smoke or odors to be exhausted from the room.

Freezing up

If you notice that your air conditioner is not cooling as it should, it may be that ice has formed on the cooling coils. The ice blocks airflow and stops the unit from cooling the room. This “freezing up” is a temporary condition that most often occurs at night when the Thermostat is set on 7 or 8 and the Selector is set on LO COOL.

To correct the condition, set the Selector at HI FAN or HI COOL with the Thermostat at 1 or 2.

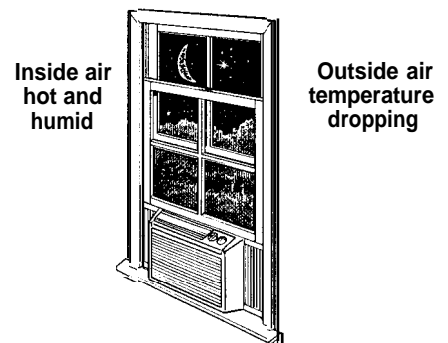

For normal cooling

1. Set the Selector at HI COOL.
2. Set the Thermostat at desired number (usually 4-5 is a good starting position). If room temperature is not satisfactory after a reasonable time, set the Thermostat Control at a higher number for a cooler room or at a lower number for a warmer room.

3. Slide the Ventilation Control to CLOSED except for brief periods when you want to exhaust room air to the outside.

For maximum cooling

1. Set the Selector at HI COOL.
2. Set the Thermostat Control to 8.
3. Slide the Ventilation Control to CLOSED.

(continued next page)



OPERATING YOUR CONTROLS

(continued)

For nighttime operation


During the cooler evening hours, we recommend that you set the Selector Switch at LO COOL for very quiet operation, and the Thermostat Control at mid-range (4 or 5). Slide the Ventilation Control to CLOSED.

For quieter operation

1. Set the Selector at LO COOL.
2. Turn the Thermostat Control to the desired number.

To adjust air direction

Up and down

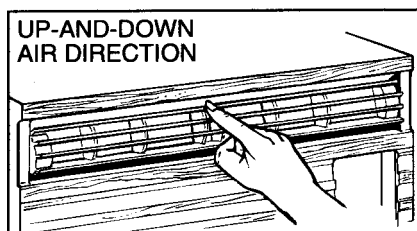


The up-and-down air direction louvers are together and are controlled by fingertip pressure on the louvers. They regulate air discharge upward, downward or straight out.

To prevent the air conditioner from cycling on and off too frequently do not position air louvers down.

For extreme temperatures

For greatest economy and best performance, we suggest that you set the Selector Switch at HI COOL in extremely hot weather.

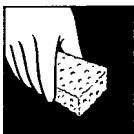

CARE AND CLEANING

User Maintenance Instructions

Turn air conditioner off and remove the plug from the wall outlet before cleaning.

Grille and Cabinet

Wipe both sides of grille with a clean cloth lightly dampened with mild liquid dishwashing detergent, or clean with a vacuum cleaner brush. Be careful not to force the movable louvers out of position.

Other areas behind the grille may be wiped or vacuumed, taking care not to damage the coil fins.

Wash cabinet with mild soap or detergent and lukewarm water. Never use strong chemicals, solvents or bleaching agents.

Condenser Coils

These coils on the weather side of the unit should be checked periodically and cleaned if clogged with dirt or soot from the atmosphere. If extremely soiled, they may need to be steam cleaned, a service available through your GE service outlet.



Air Filter


The air filter behind the front grille should be checked and cleaned at least every 30 days or as often as it needs cleaning.

To remove the filter:

Grasp the tab at the bottom of the unit and pull downward.

Clean the air filter with a vacuum cleaner to remove light dust. Wash the filter in lukewarm, soapy water and rinse in clear water to remove sticky dust.

When replacing the filter, be sure the word FRONT is facing you as you slide the filter back into place.

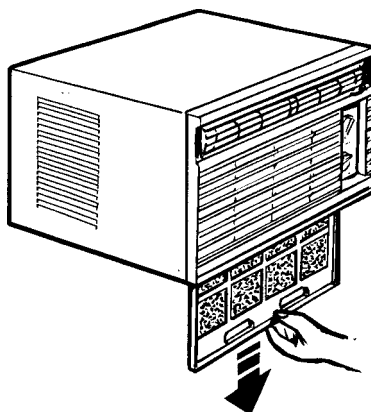


Front Grille Removal

If your air conditioner is mounted flush inside the room or if the window sill extends farther into the room than the chassis, it may be necessary to remove the front grille before the filter can be removed.


To remove the grille:

1. Remove and save screw below control panel that holds grille to cabinet.
2. Pull out the front grille until the clip on lower left side of the front grille is free of slot.

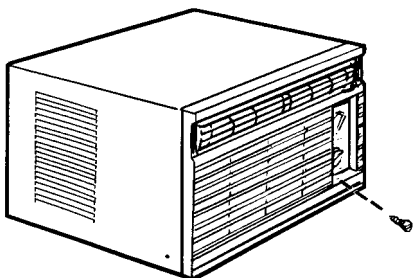


Do not pull bottom edge of grille toward you more than 3"-damage to grille's two top tabs may occur.

3. Grasp grille at both sides near the bottom and carefully lift straight up to disengage grille's two top tabs from slots near top of cabinet.

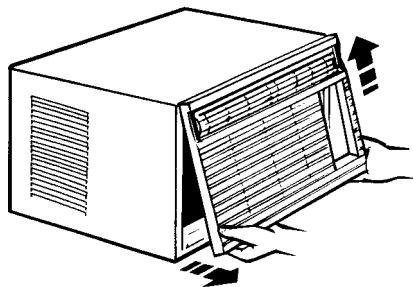


To replace the grille:

1. Fit tabs at top of grille into slots near top of cabinet.
2. Push the vent lever up to fit into the air discharge slot in the grille as you swing the bottom of the grille toward the chassis.
3. Press inward on the lower left side of the cabinet at the location of the slot and then carefully push the grille in until the tab engages the slot.
4. Replace previously removed screw to secure the grille to the chassis.

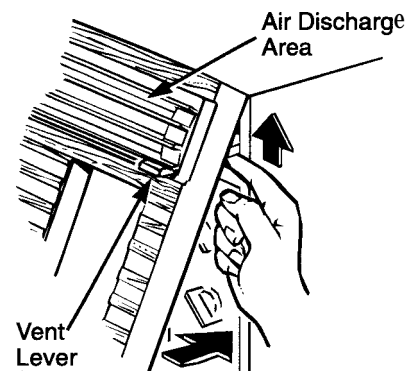

Note: The vent lever will break if the grille is forced on with the vent lever pointing straight out as shown at right.

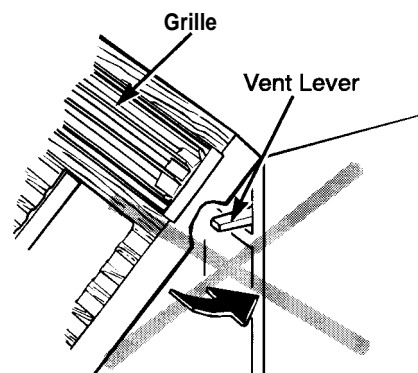



INSTALLATION INSTRUCTIONS

BEFORE YOU BEGIN

Read these instructions completely and carefully.

IMPORTANT—Observe all governing codes and ordinances.

INSTALLER—Be sure to leave these instructions with the consumer.

CONSUMER—Keep these instructions for future reference.

ELECTRICAL REQUIREMENTS


FOR PERSONAL SAFETY:

- **THIS APPLIANCE MUST BE PROPERLY GROUNDED.** See Installation Instructions.
- **DO NOT, UNDER ANY CIRCUMSTANCES, CUT OR REMOVE THE THIRD GROUNDING PRONG FROM THE POWER CORD.**
- **WE RECOMMEND THAT YOU DO NOT USE AN EXTENSION CORD OR AN ADAPTER PLUG WITH THIS APPLIANCE.**
- **DO NOT CHANGE THE PLUG ON THE POWER CORD OF THIS APPLIANCE.**
- **FOLLOW NATIONAL ELECTRICAL CODES OR LOCAL CODES AND ORDINANCES.**

115V
15 AMP circuit
"parallel" type



230V/208V
20 AMP circuit
"perpendicular" type



230V/208V
15 AMP circuit
"tandem" type




230 V/208V
30 AMP circuit
"tandem" type



- If the electric supply provided does not meet the above specifications, call a licensed electrician.
- Aluminum house wiring may pose special problems+ onsult a qualified electrician.
- This unit requires a separate circuit serving only this appliance.

WINDOW REQUIREMENTS

- Standard double-hung window with actual opening width of 25½" to 37."
- Clear vertical opening of 1 4/4" minimum from bottom of sash to sill.
- Install the air conditioner in a window where there will be enough clearance around the cabinet to allow ample circulation of air through the unit.

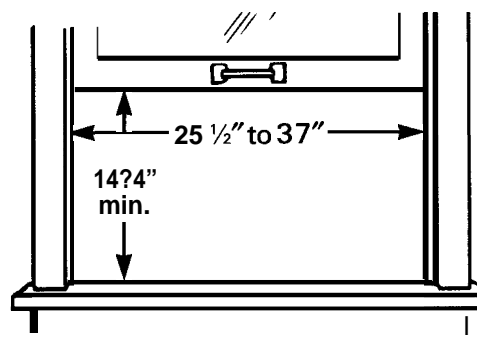

Note: All supporting parts should be secured to firm wood, masonry or metal.

WINDOW INSTALLATION



TOOLS NEEDED

- Blade-type screwdriver
- Phillips head screwdriver
- Adjustable wrench
- Sharp knife or razor blade
- Rule or tape measure
- Pencil
- Level

HARDWARE FURNISHED

Type A




Qty-5

Type B



Qty-14

Type C




Qty-2

Type D




Qty-3

Type E

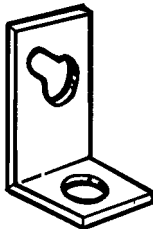

Qty-1

Type F

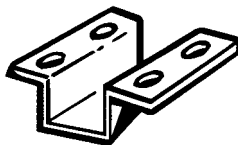


Qty-2

1. REMOVE THE FRONT GRILLE


See instructions in the Care and Cleaning section.

2. REMOVE THE CHASSIS.

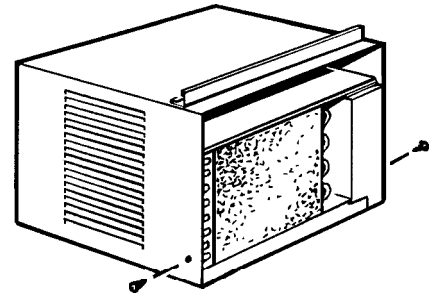

1. Remove and save retaining screws on each side that lock chassis to cabinet.
2. Remove and save foam gasket located between the bottom of the chassis and the inside bottom of the cabinet.
3. Slide the chassis out of the cabinet.

3. ASSEMBLE **WINDOW FILLER** PANELS TO **CABINET**.

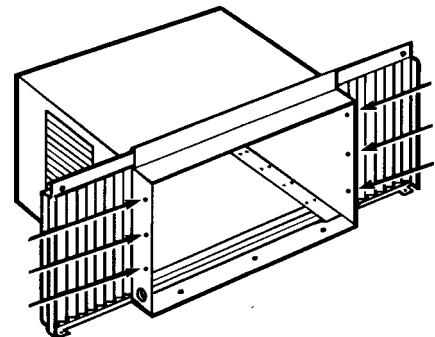

Slide window filler panels and their frames into channels on top and bottom of cabinet and assemble them to cabinet using six Type B screws.


(continued next page)



WINDOW INSTALLATION


(continued)

4. ATTACH SUPPORT BRACKETS TO CABINET.

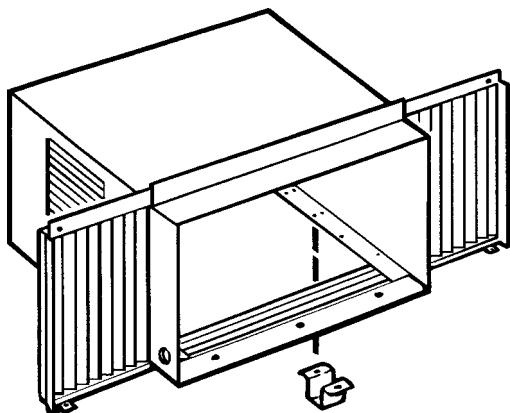


Select the **support** bracket position that will place the bracket near the outermost point on the window sill. Using eight Type B screws, attach support brackets to each side of cabinet bottom.

5. ATTACH SEAL STRIP TO WINDOW

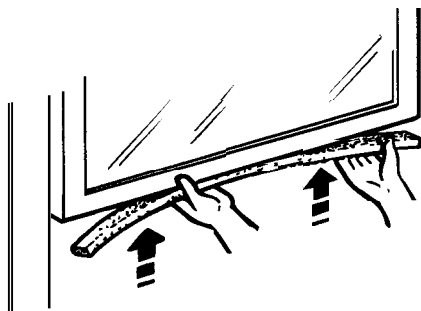

1. Cut adhesive-backed foam seal strip gasket to window width.
2. Remove backing from seal strip and attach strip to underside of the bottom window sash.

6. INSTALL CABINET IN WINDOW.

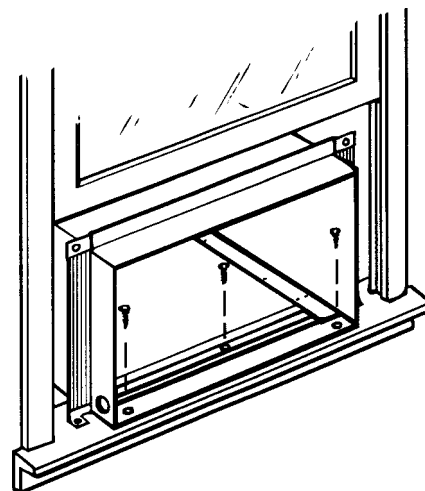


1. Place air conditioner cabinet into window with frame on the top of the cabinet positioned just in front of the bottom sash. Pull window down until it rests on the air conditioner cabinet just behind the front flange of frame on the top of the cabinet.
2. Locate three screw holes along the cabinet bottom front edge that were covered by the foam gasket. Center cabinet, side to side, in window and mount it to window sill using three Type D screws through the foam gasket and cabinet bottom.
3. Thread the Type C bolts into the support brackets, making sure the cabinet maintains a slightly downward slant to the outside. A 1/4" slant, cabinet front to rear, is desirable.



7. **EXTEND WINDOWFILLER PANELS.**


1. When pulled down, window should rest on cabinet just behind the window filler panel frames.

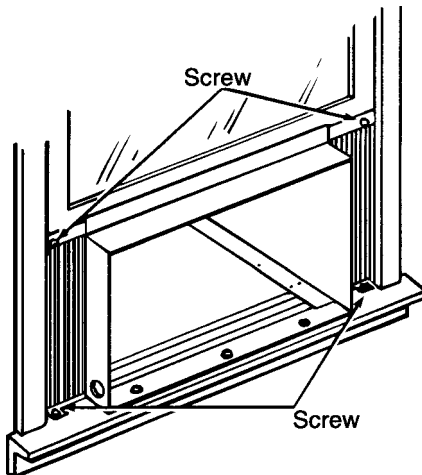

2. Slide filler panels outward until they touch window sash tracks. Secure panels by putting four Type A screws through mounting holes in panels and driving them into window sash and sill.


8. **SLIDE CHASSIS INTO CABINET.**

1. Carefully slide chassis back into cabinet.

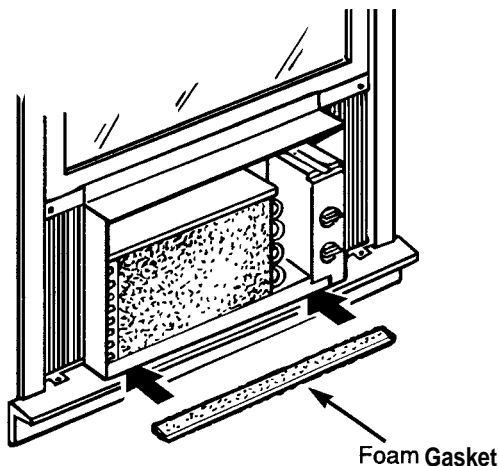


2. Reinsert foam gasket (removed in Step 2) between bottom of chassis and inside bottom of cabinet.
3. Reinstall chassis-to-cabinet retaining screws removed in Step 2.

9. **INSTALL SASH-GAP GASKET.**

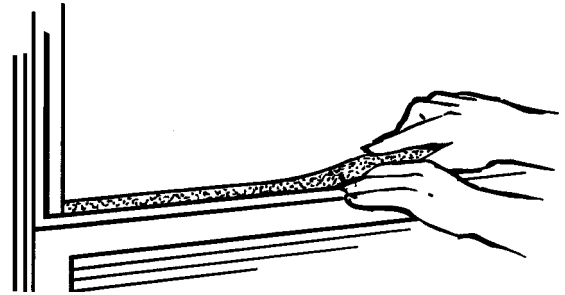

Cut foam sash-gap gasket to window width and stuff it between window sashes.

10. **INSTALL WINDOWLOCK**

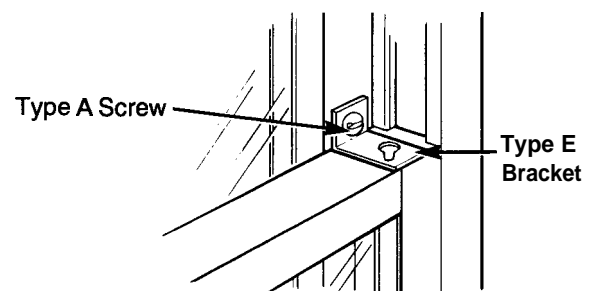

Attach right angle safety lock (Type E bracket) with Type A screw as shown.

11. **REINSTALL THE GRILLE**

See instructions in the Care and Cleaning section.

12. **CHECK FOR AIR LEAKS.**

Some installations may require additional sealing around the window and air conditioner. Check for air leaks and seal.

See *next page* for *Through-the-Wall Installation Instructions*



THROUGH-THE-WALL INSTALLATION

THE *CABINET MAY BE INSTALLED*
THROUGH THE WALL IN BOTH EXISTING
BUILDINGS AND NEW CONSTRUCTION

IMPORTANT

- Any **side louvers** must project on the outdoor side of the wall.
- The room side of the cabinet must project into the room at least 1" from the finished wall.
- The cabinet must be installed level from side to side and with a 3/8" tilt from front to rear.

TOOLS REQUIRED


- Phillips head screwdriver
- Blade-type screwdriver
- Magnetic stud finder (optional)
- Tin snips
- Handsaw
- Level
- Chisel
- Concrete saw (if installing through a masonry wall)
- Hammer
- Caulking gun
- Tape measure

ADDITIONAL MATERIALS (obtain locally)

- 12 #10 wood screws, 1" long
- 1 tube high grade caulking compound
- Wooden framing studs
- Lintel, if required, to support bricks or blocks above opening
- Flashing, aluminum or galvanized steel

1. PREPARE WALL OPENING.

1. Determine size of opening. Measure width and height of cabinet and add 1/8" to each dimension.

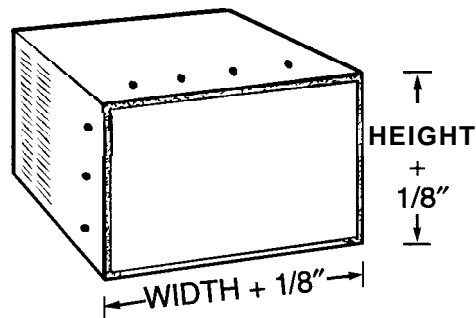


2. Choose the wall opening location. Be sure a power receptacle is (or will be) installed nearby.
3. Make the opening. Frame it to support the weight of the air conditioner. Add metal flashing over bottom of frame opening and 1" up on sides to reduce the possibility of moisture entering the area between the inner and outer wall. The flashing lip should be 1" wide and bent down 45°. See the illustration on the next page.

2. PREPARE THE CABINET

1. See *Window installation section*.
2. With caulking compound or electrical tape, seal all holes provided in the cabinet for window installation hardware not used in this installation.

3. INSTALL *CABINET IN* WALL.

1. Place the cabinet into the wall opening with the bottom rail resting firmly on the bottom of the wood frame.

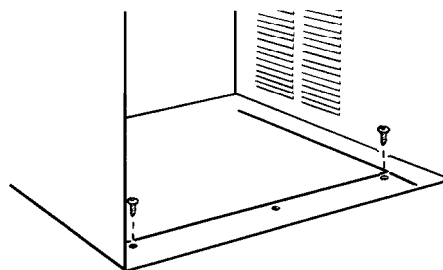


2. Secure cabinet bottom rail to wooden frame with two 1" long #10 wood screws.




3. INSTALL CABINET IN WALL. *(continued)*

3. Secure cabinet sides to wooden frame with six 1" long #1 O wood screws and secure cabinet top to frame with four 1" long #1 O wood screws.

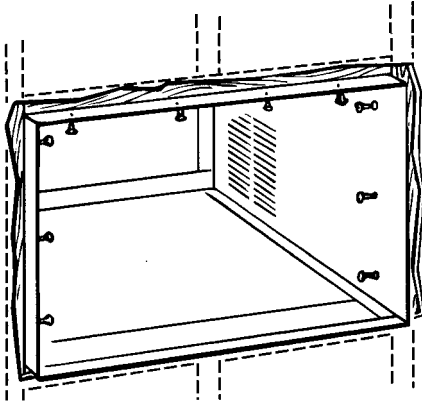

Drill holes in cabinet sides and top, if necessary for proper installation. If frame is oversize, use shims to prevent cabinet distortion.

4. Caulk all four sides on the outdoor side of cabinet to prevent moisture from **getting** through to the interior wall. Use of flashing (a piece of aluminum or galvanized steel available at most hardware stores) will further prevent moisture from getting into interior walls.
5. For a tight seal along the bottom of the unit, caulk around the bottom rail. Install wood trim molding (obtained locally) around roomside projection of cabinet, if desired.

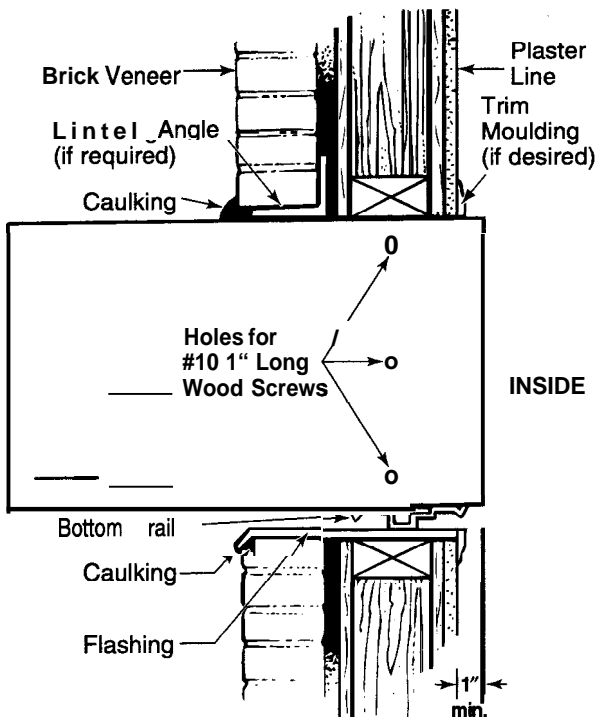

4. SLIDE CHASSIS INTO CABINET

Lift the chassis and carefully slide it into cabinet. Do not push on controls or finned coils. Make sure chassis is firmly seated toward rear of cabinet.

5. INSTALL CHASSIS RETAINING SCREWS.

Reinstall chassis-to-cabinet retaining screws removed in Step 2.

6. INSTALL FILTER AND GRILLE

See *Care and Cleaning* section.



QUESTIONS? USE THIS PROBLEM SOLVER

PROBLEM	POSSIBLE CAUSE
AIR CONDITIONER DOES NOT OPERATE	<ul style="list-style-type: none">• Not plugged in. Plug may have been bumped loose by vacuum cleaner or furniture.* If plugged in, fuse could have blown or circuit breaker may have tripped.
AIR CONDITIONER "DOES NOT COOL AS IT SHOULD"	<ul style="list-style-type: none">• Curtains, blinds or furniture blocking front of air conditioner will restrict air flow.• Thermostat Control may not be set high enough. Turn knob to a higher number. Highest setting should provide maximum cooling.• Air filter dirty, should be cleaned at least every 30 days. See the Care and Cleaning section.* Room may have been very hot when air conditioner was first turned on. Allow time for it to cool down.• Cold air maybe escaping through open furnace floor registers and cold air returns.* Ventilation control may be set at OPEN position, allowing hot outside air to enter the room.• Cooling coils have iced up. To melt ice, set the Selector Switch to HIGH FAN and the Thermostat Control to a lower number.
OPERATING SOUNDS	<ul style="list-style-type: none">• Thermostat click, a metallic sound, may be heard when compressor cycles on and off. This is normal.• Fans run continuously when Selector Switch is in COOL or FAN position. This is normal.
WATER DRIPPING OUTSIDE	<ul style="list-style-type: none">• Excess water may overflow in excessively hot and humid weather. This is normal.
WATER DRIPPING INSIDE	<ul style="list-style-type: none">• Air conditioner must be installed with the specified tilt to the outside for proper water disposal.
WATER IN BASE PAN (ON OUTDOOR SIDE)	<ul style="list-style-type: none">* This is normal for a short period in areas with little humidity; normal for a longer period in very humid areas. Moisture removed from indoor air drains to rear of cabinet where it is picked up by a fan and thrown against the outdoor condenser coil.

If you need more help... call, toll free:
GE Answer Center®
800.626.2000
consumer information service


With the purchase of your new GE appliance, receive the insurance that if you ever need information or assistance from GE, we'll be there. All you have to do is call—toll-free!

In-Home Repair Service ***800-GE-CARES (800-432-2737)***

A GE consumer service professional will provide expert repair service, scheduled at a time that's convenient for you. Many GE Consumer Service company-operated locations offer you service today or tomorrow, or at your convenience (7:00 a.m. to 7:00 p.m. weekdays, 9:00 a.m. to 2:00 p.m. Saturdays). Our factory-trained technicians know your appliance inside and out—so most repairs can be handled in just one visit.

GE Answer Center® ***800.626.2000***

Whatever your question about any GE major appliance, GE Answer Center® information service is available to help. Your call—and your question—will be answered promptly and courteously. And you can call any time. GE Answer Center® service is open 24 hours a day, 7 days a week.

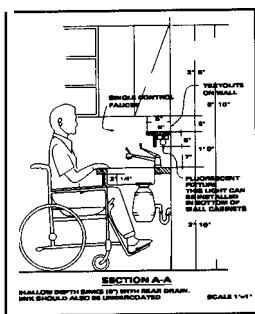

For Customer With Special Needs...

Upon request, GE will provide Braille controls for a variety of GE appliances, and a brochure to assist in planning a barrier-free kitchen for persons with limited mobility. To obtain these items, free of charge, call 800.626.2000.

Consumers with impaired hearing or speech who have access to a TDD or a conventional teletypewriter may call 800-TDD-GEAC (800-83 3-4322) to request information or service.

Service Contracts ***800-626-2224***

You can have the secure feeling that GE Consumer Service will still be there after your warranty expires. Purchase a GE contract while your warranty is still in effect and you'll receive a substantial discount. With a multiple-year contract, you're assured of future service at today's prices.

Parts and Accessories ***800-626-2002***

Individuals qualified to service their own appliances can have needed parts or accessories sent directly to their home. The GE parts system provides access to over 47,000 parts...and all GE Genuine Renewal Parts are fully warranted. VISA, MasterCard and Discover cards are accepted.

User maintenance instructions contained in this booklet cover procedures intended to be performed by any user. Other servicing generally should be referred to qualified service personnel. Caution must be exercised, since improper servicing may cause unsafe operation.

YOUR GE AIR CONDITIONER WARRANTY

Staple sales slip or cancelled check here. Proof of original purchase date is needed to obtain service under warranty.

WHAT IS COVERED

FULL ONE-YEAR WARRANTY

For one year from date of original purchase, we will provide, free of charge, parts and on-site service labor to repair or replace **any part of the room air conditioner** that fails because of a manufacturing defect.

FULL FIVE-YEAR WARRANTY

For five years from the date of original purchase, we will provide, free of charge, parts and on-site service labor to repair or replace **any part of the sealed refrigerating system** (the compressor, condenser, evaporator and all connecting tubing) that fails because of a manufacturing defect.

For each of the above warranties: Transportation expense to and from a service shop and shop service labor if required will be free of charge.

This warranty is extended to the original purchaser and any succeeding owner for products purchased for use in the 48 mainland states, Hawaii and Washington, D.C. In Alaska the warranty is the same except that it is LIMITED because you must pay to ship the product to the service shop or for the service technician's travel costs to your home.

All warranty service will be provided by our Factory Service Centers or by our authorized Customer Care® servicers during normal working hours.

Should your appliance need service, during warranty period or beyond, call 800-GE-CARES, (800-432-2737).

WHAT IS NOT COVERED

- Service trips to your home to teach you how to use the product.

Read your Use and Care material. If you then have any questions about operating the product, please contact your dealer or our Consumer Affairs office at the address below, or call, toll free:

GE Answer Center®
800.626.2000
consumer information service

- Improper installation.

If you have an installation problem, or if the air conditioner is of improper cooling or heating capacity for the intended use, contact your dealer or installer. You are responsible for providing adequate electrical connecting facilities.

- Replacement of fuses or resetting of circuit breakers.

. In commercial locations labor necessary to move the unit to a location where it is accessible for service by an individual technician.

- Failure of the product resulting from modifications to the product or due to unreasonable use including failure to provide reasonable and necessary maintenance.

- Failure due to corrosion on models not corrosion-protected.

- Damage to the product caused by improper power supply voltage, accident, fire, floods or acts of God.

WARRANTOR IS NOT RESPONSIBLE FOR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. To know what your legal rights are in your state, consult your local or state consumer affairs office or your state's Attorney General.

Warrantor: General Electric Company

**If further help is needed concerning this warranty, write:
Manager—Consumer Affairs, GE Appliances, Louisville, KY 40225**